

# Clebo FD20

**IP 2.1MP Vandal Dome Camera**

## User Manual



Before installing and using the Clebo Camera, please read this manual carefully.  
Be sure to keep it handy for future reference.

## PRECAUTIONS

---

- Do not open or modify.
- Do not open the case except during maintenance and installation, for it may be dangerous and can cause damages.
- Do not put objects into the unit.
- Keep metal objects and flammable substances from entering the camera. It can cause fire, short-circuits, or other damages.
- Be careful when handling the unit.
- To prevent damages, do not drop the camera or subject it to shock or vibration.
- Do not install near electric or magnetic fields.
- Protect from humidity and dust.
- Protect from high temperature.
- Be careful when installing near the ceiling of a kitchen or a boiler room, as the temperature may rise to high levels.
- Cleaning: To remove dirt from the case, moisten a soft cloth with a soft detergent solution and wipe.
- Mounting Surface: The material of the mounting surface must be strong enough to support the camera.

## FCC COMPLIANCE

---

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference, when the equipment is operated in a residential environment. This equipment generates, uses, and radiates radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications.

**WARNING:** Changes or modifications are not expressly approved by the manufacturer.

# TABLE OF CONTENTS\*

<b>Introduction.....</b>	<b>4</b>
Features.....	4
Inside the Box.....	5
Parts.....	6
Camera Control Board.....	7
Dimensions.....	8
<b>Installation.....</b>	<b>9</b>
Network Connection.....	9-10
Mounting the Camera.....	11-15
Storage Device Installation.....	16
Adjusting the 3-Axis Gimbal.....	17
<b>Clebo Camera Setup.....</b>	<b>18</b>
Installing the IP Finder.....	18
Using IP Finder Software.....	19-20
Network Options.....	21
Camera Reboot.....	22
<b>Clebo Camera Web Viewer.....</b>	<b>23</b>
Accessing the Web Viewer via Internet Explorer.....	23
Accessing the Web Viewer via Google Chrome, Mozilla Firefox and Safari.....	24
First & Second Stream.....	25
Export Image.....	26
Print Image.....	27
Panic Recording.....	28-29
<b>Clebo Camera Setup.....</b>	<b>30</b>
Video.....	30-34
Event.....	35-38
Network.....	39-43
Record & Remote Backup.....	44-47
System.....	48-54
<b>Specifications.....</b>	<b>55-56</b>
<b>Troubleshooting.....</b>	<b>57-60</b>
<b>Warranty.....</b>	<b>61</b>
<b>Limits &amp; Exclusions.....</b>	<b>62</b>

# FEATURES\*

- ONVIF Support (V1.02)
- Local SDHC Card Backup
- Sony 1/2.8" CMOS Sensor
- Highest Resolution 2.1 Megapixels
- 1080P (1920x1080) at 30fps
- 4x Auto-Focus 3.5~16mm Lens
- Triple Codec H.264, MPEG4, MJPEG
- Double Shutter WDR(Wide Dynamic Range) at 15fps Settings
- 70ft Range IR with Intelligent Camera Sync (MV421TIR)
- True Day and Night (MV421TIR)
- 3D-DNR (3D Digital Noise Reduction)
- Web Server Built-in
- Dual Streaming
- Programmable Privacy Zones (30)
- Mirror
- Remote Client Setup & Upgrade
- Digital Zoom
- FTP Upgrade Support
- Power over Ethernet [PoE] & DC12V
- UPnP Support
- Junction Box Built-in
- IP68 Certified

# INSIDE THE BOX\*


The following items are included with the MEGAPIXEL Camera:



1. Quick Start Guide
2. 4 Screws & 4 Dry Wall Anchors
3. Secondary Video-BNC Cable
4. TROX-T20
5. Mounting Template
6. CD (Manual + Software)
7. DC Plug Camera Module
8. L-Wrench
9. TROX-T20 Bolt



# PARTS & DESCRIPTIONS\*


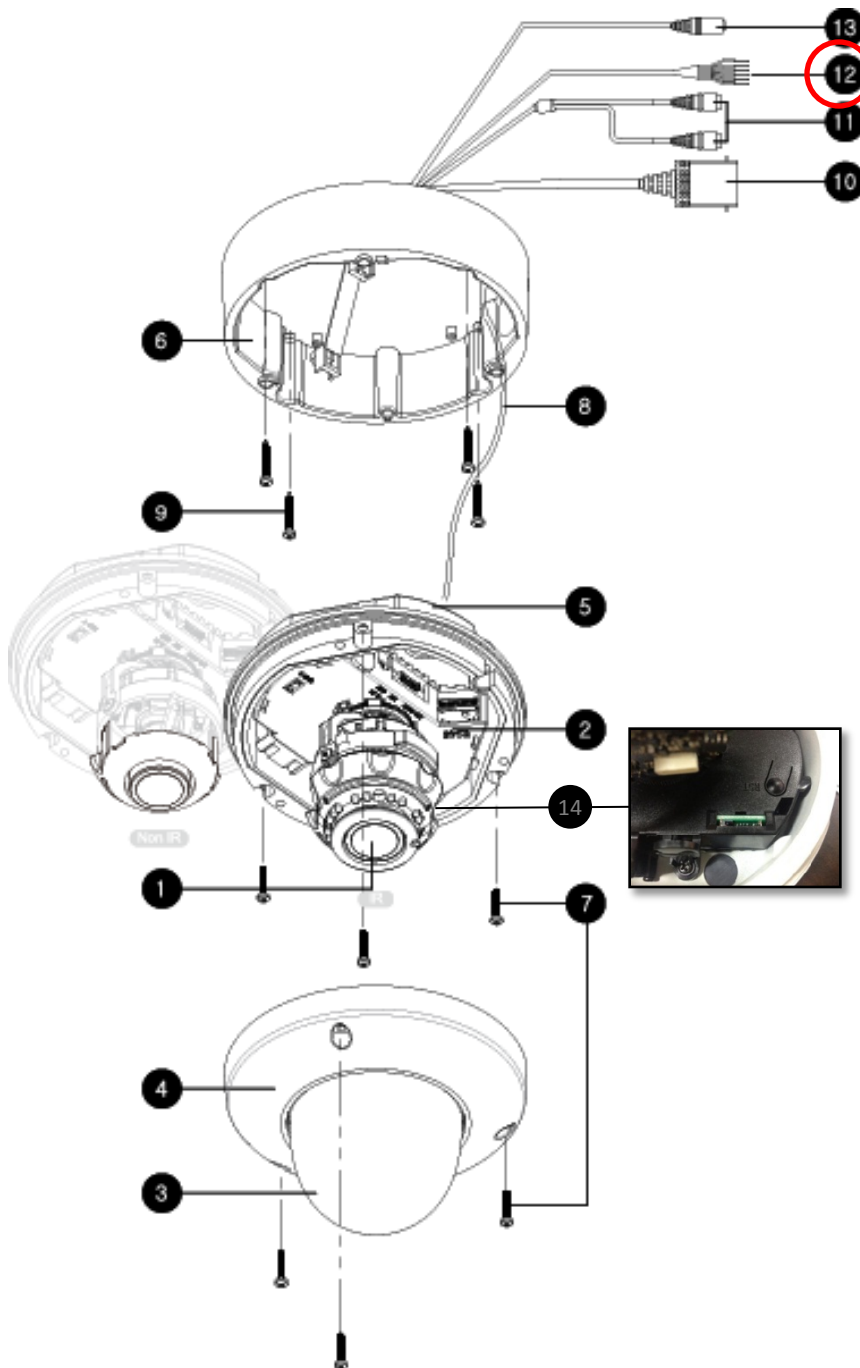


1. Lens
2. Camera Control Board
3. Bubble
4. Cover Dome
5. Flush Mount Base
6. Surface Mount Plate
7. Assembly Screws
  - a) T20 M4 X16
8. Safety Wire
9. Mounting Screws
10. RJ45 Connector
11. Audio In/ Out
12. Alarm
13. Power
14. SD Card Slot






# DIMENSIONS\*

## Flush Mount

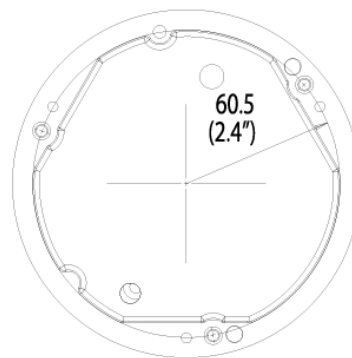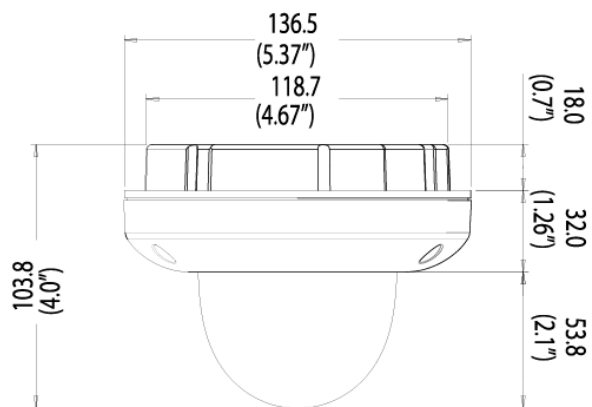

## Surface Mount

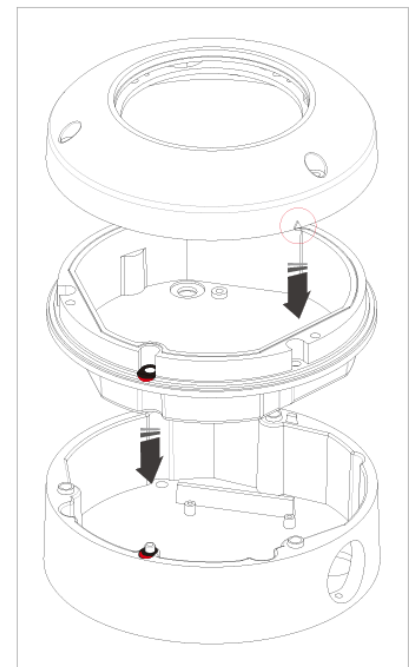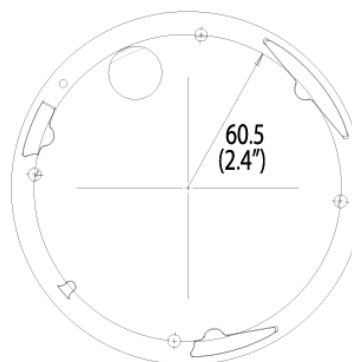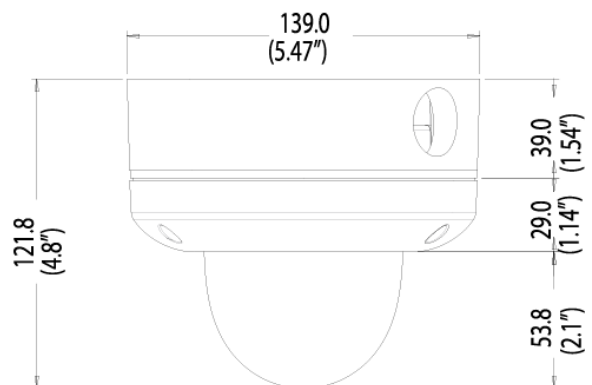


# NETWORK CONNECTION\*

## Two Options

***Use a PoE-enabled switch to connect data and power through a single cable and begin viewing and recording images instantly. A non-PoE switch will require an adaptor for power transmission.***

### 1. Using a PoE-Enabled Switch

The Clebo Camera is PoE-Compliant, allowing transmission of power and data via a single Ethernet cable. PoE eliminates the need for the different cables used to power, record, or control the camera. Follow the illustration below to connect the camera to a PoE-enabled switch using an Ethernet cable.


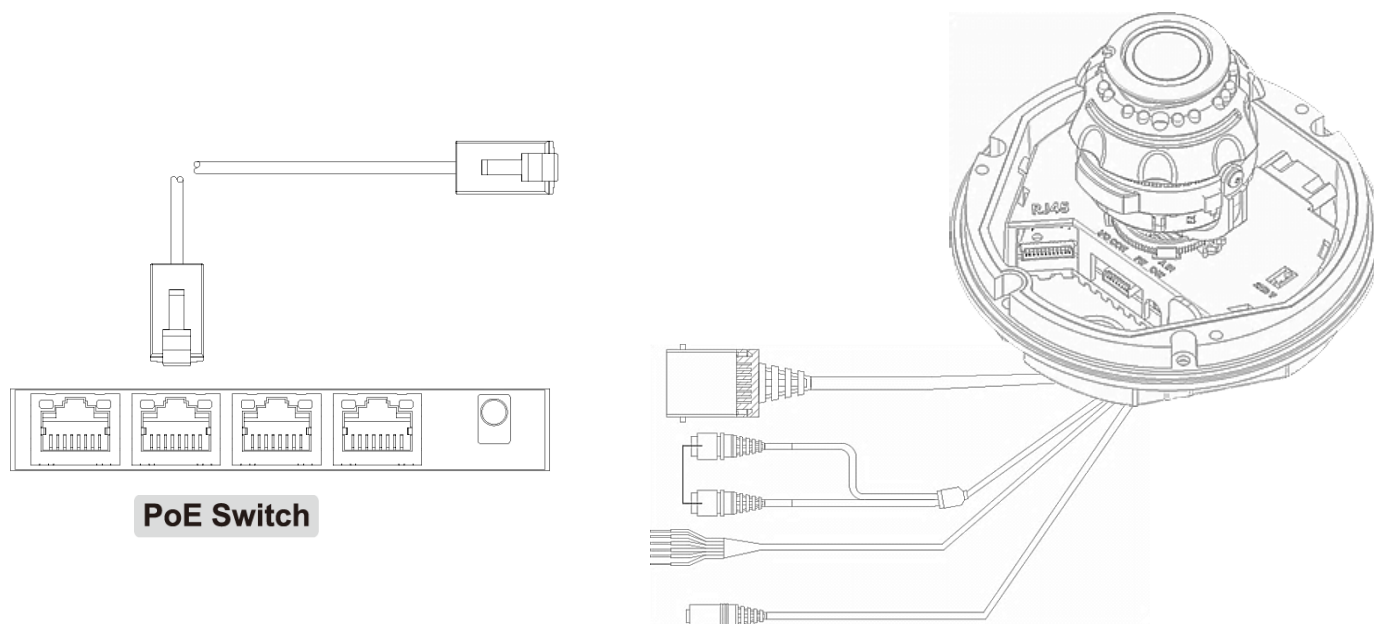




# NETWORK CONNECTION\*

## 2. Using a Non-PoE Switch





If a PoE-enabled switch is not used, use a power adaptor for power transmission and non-PoE switch for data transmission. Follow the illustrations below to connect the camera without a PoE-Enabled Switch.

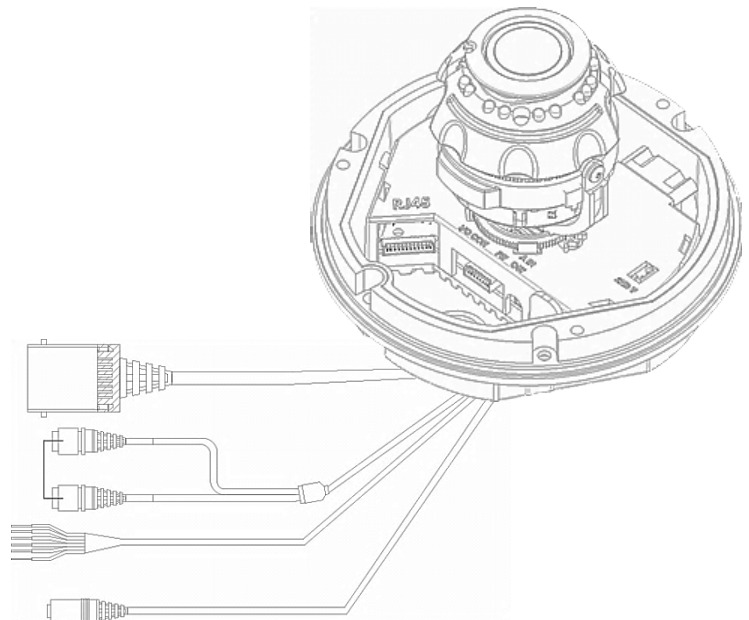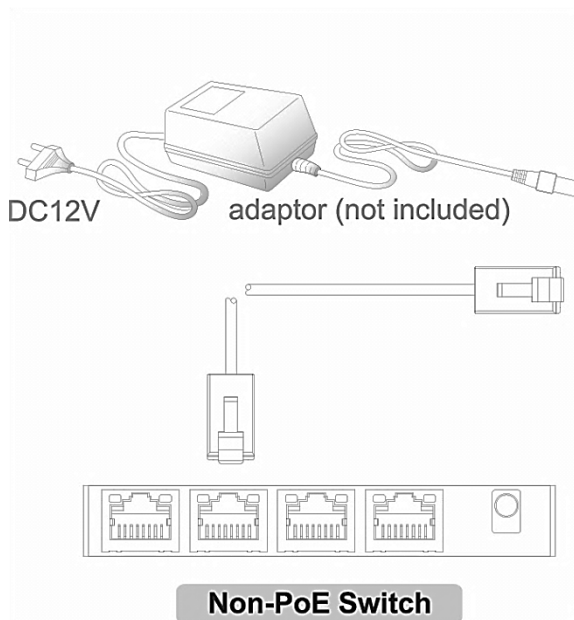

# INSTALLATION\*


## Snapit Easy Installation

*The Snapit easy installation is a unique technology that allows you to install the camera in four easy steps.*

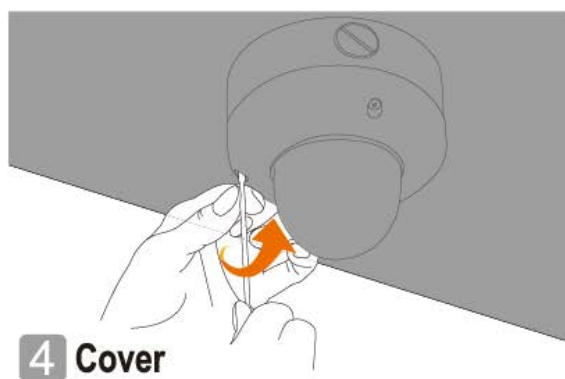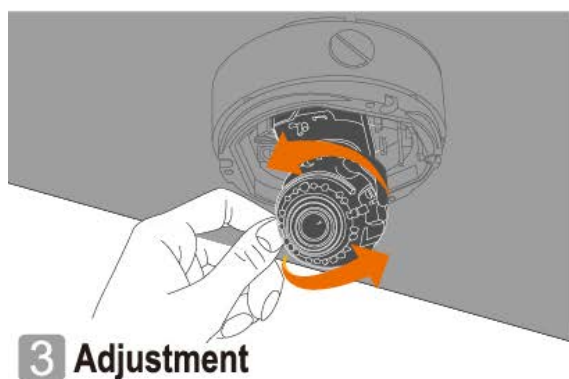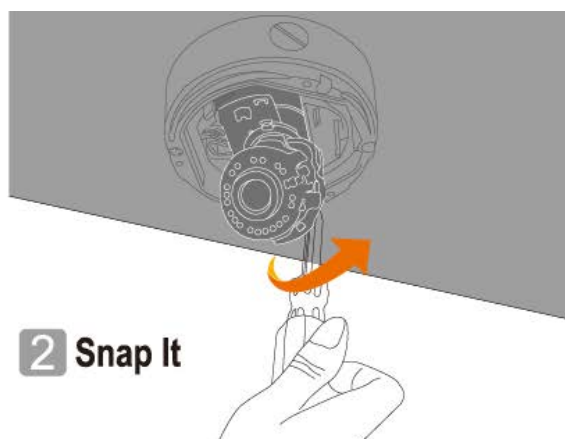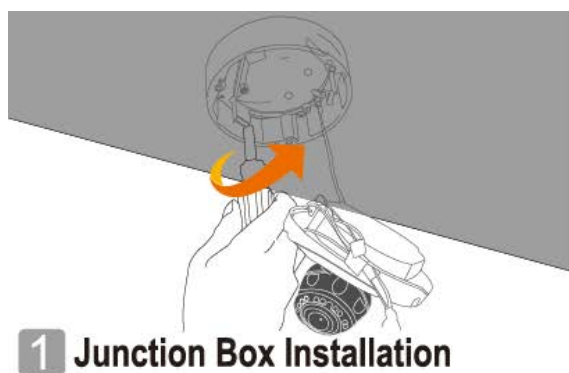

# INSTALLATION\*

1

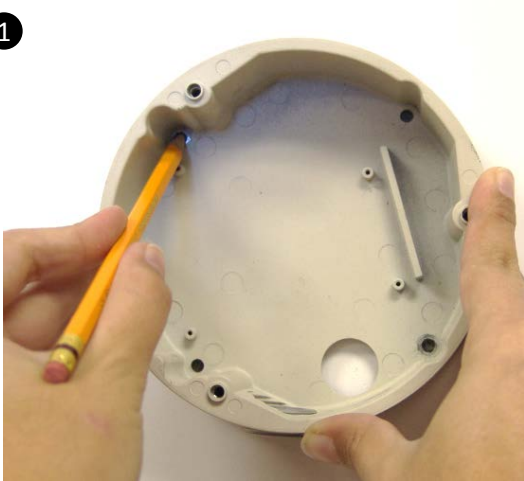


1. Use the camera's mounting template or your camera to mark the holes as required.

2




2. Drill holes into the drywall and insert the drywall mounts into the holes.

3

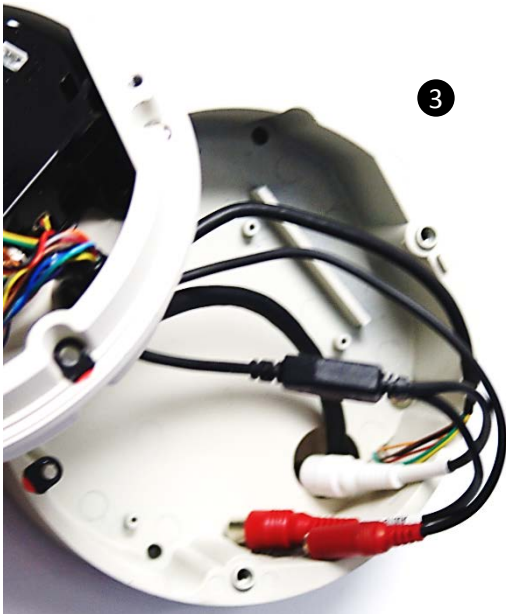



3. Pull wires through and make connections.

4

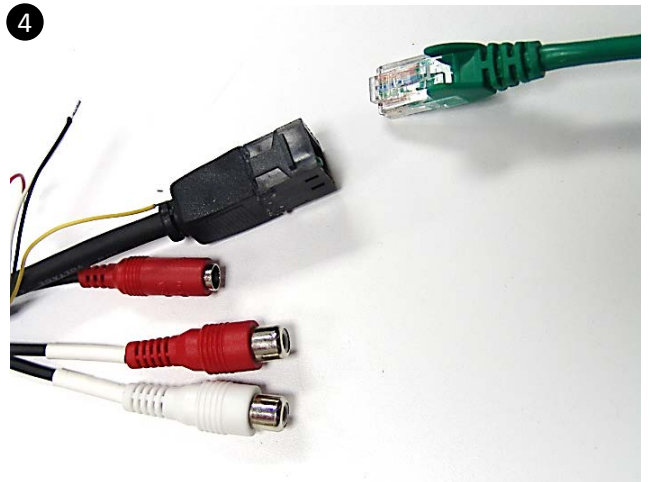


4. Connect the RJ45 to a CAT5 cable or a power adaptor. Refer to "**Network Connection**" for further explanation.

# INSTALLATION\*

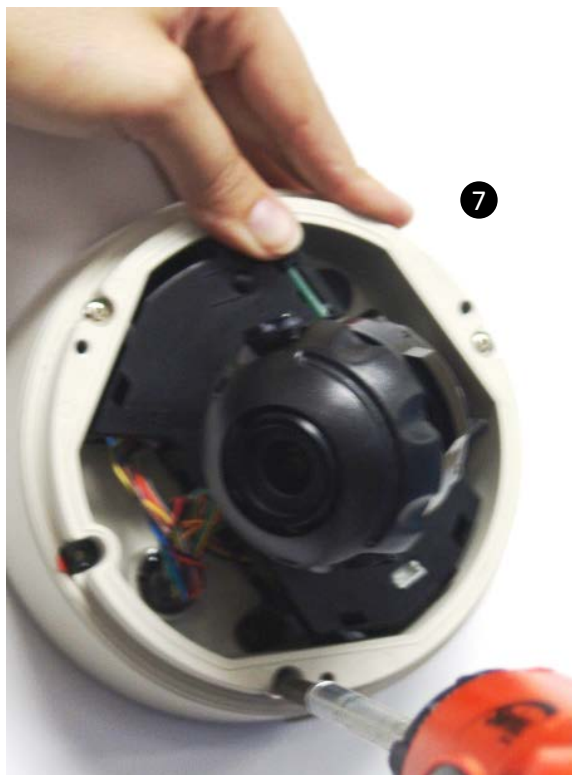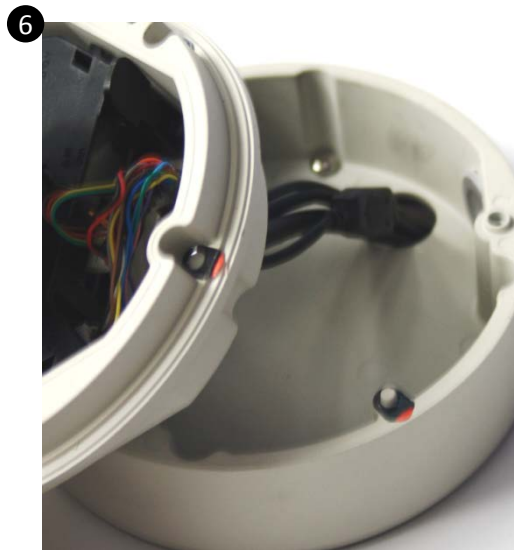

5. Mount the camera Surface Mount Base to the wall.
6. Snap the camera module onto the base by aligning the red and black markings on the base and the camera module.
7. Secure the three (3) Assembly Screws.

# INSTALLATION\*

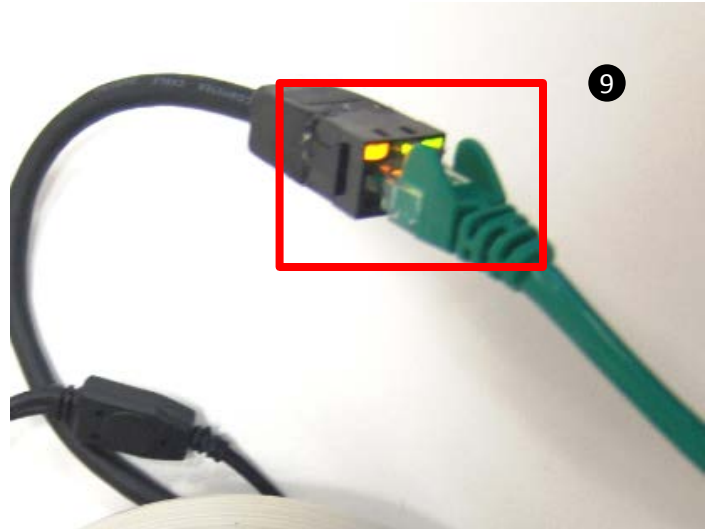

8. Adjust the camera's position by using the 3-Axis Gimbal.
9. Check the LED light. Green light flickers for booting. Red light turns on when booting is complete.
10. Tighten the four locking screws in with the L-wrench to secure the cover dome over the camera.




# INSTALLATION\*

## Wall Mount for V4 Housing



1. Verify all parts are in the box.

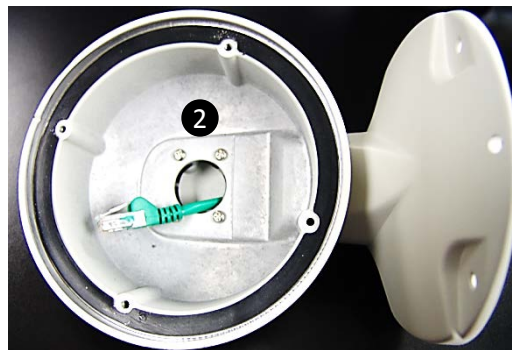

2. Run cables into the mount.



3. Use the mounting template to make pilot holes. Use the dry wall anchors and wood screws to attach the assembly to the wall.



4. Attach the camera's Surface Mount Plate to the Wall Mount.



5. Connect all cables and snap the camera module onto the base.



6. Adjust the camera and secure the cover dome over the camera module.

# INSTALLATION\*

## Ceiling Mount for V4 Housing



1. Verify all parts are in the box.



2. Attach the top shield to the pendant mount.



3. Run all necessary cables from the ceiling to the mount.



4. Use the mounting template to make pilot holes. Use the dry wall anchors and wood screws to attach the assembly to the wall.



5. Connect all cables and verify camera is operating properly.



6. Attach the camera to the ceiling mount and secure the cover dome properly.


# INSTALLATION\*

## Storage Device

*The MV421 Megapixel Cameras offer the option of local emergency backup in case of network loss.*

### To install the SD card:


1. Locate the SD card slot in the back of the camera module.
2. Insert the SD card in the slot and push it down, until you hear a 'click' sound.
3. To remove SD card, press the SD card down until you hear a 'click.' The SD card will eject from the slot.
4. Upon completion, go to the camera's Webviewer. (See page 44 for more information.)

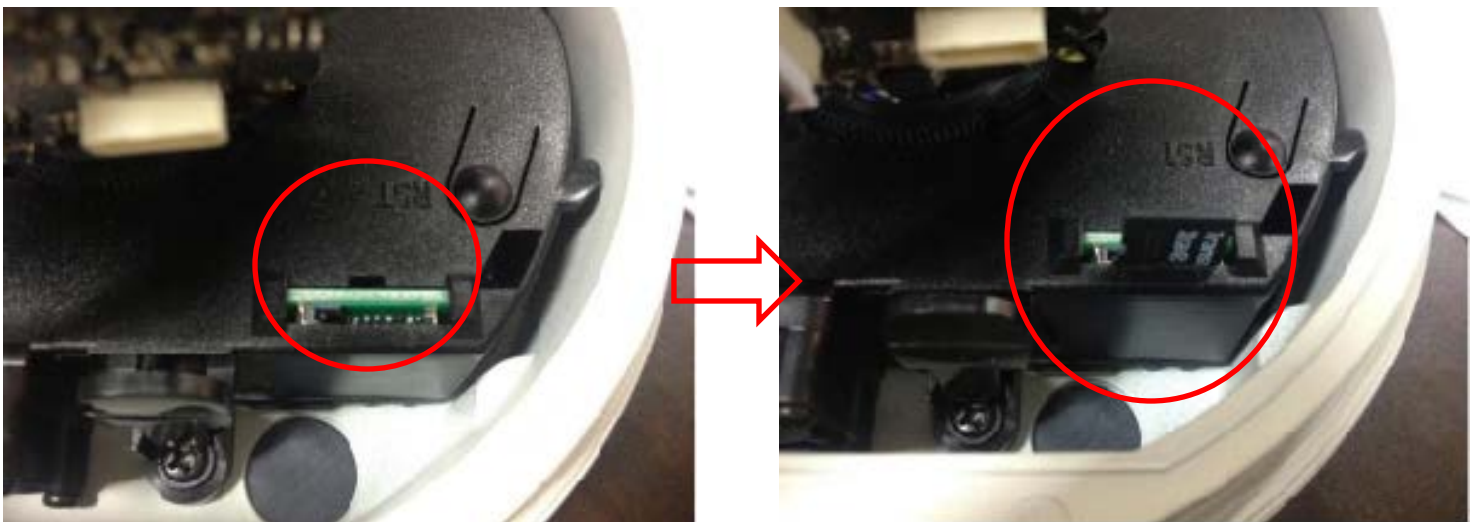



# ADJUSTING THE 3-AXIS GIMBAL\*

The Gimbal mechanism yields maximum rotation and placement as shown below.

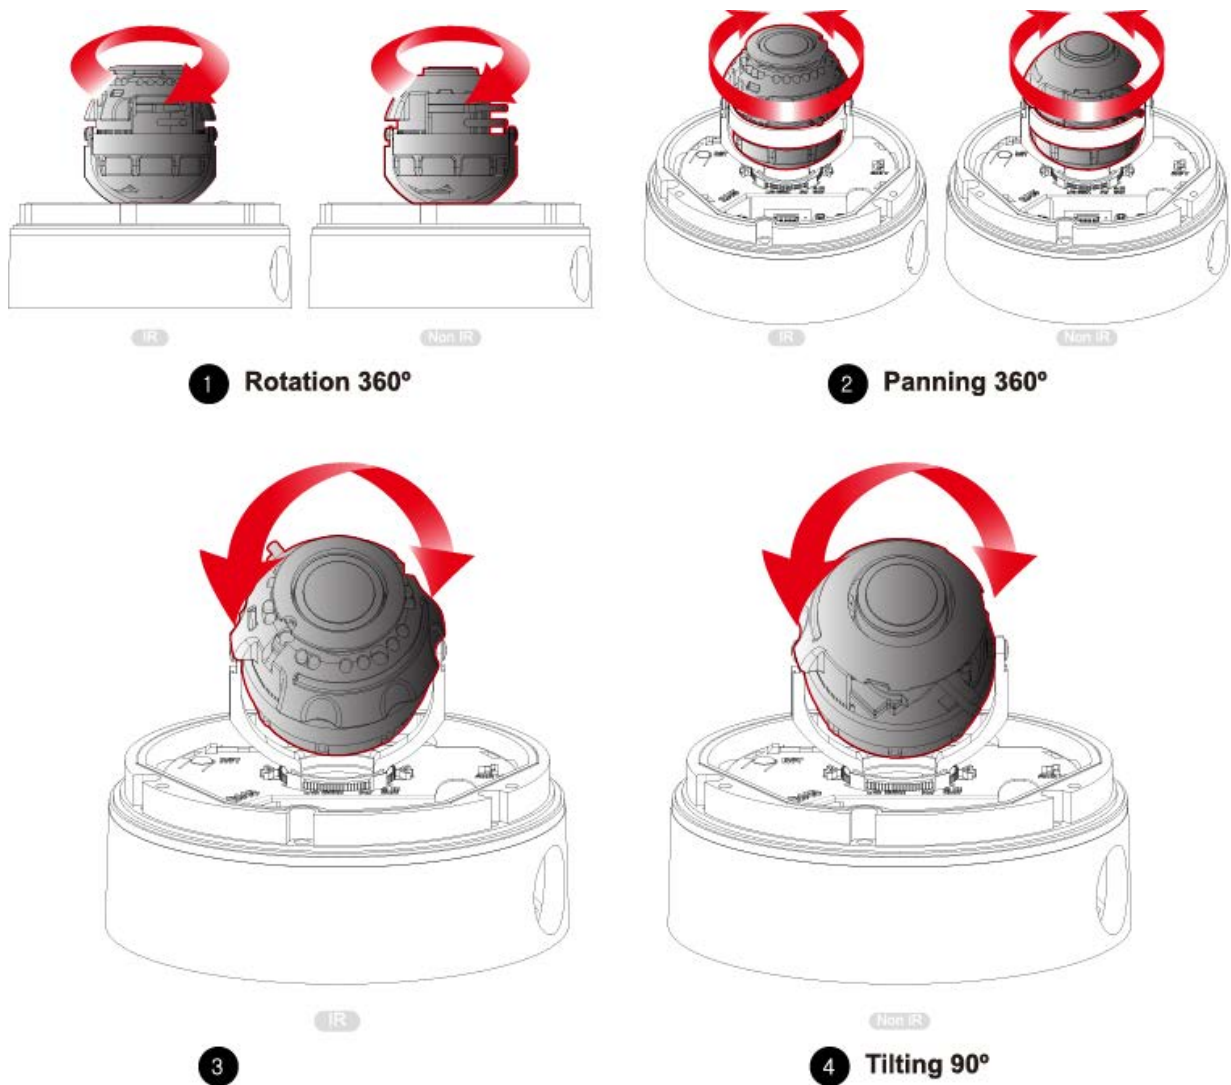


*Do not over rotate the lens. Doing so will damage the camera lens module.*

# IP FINDER SOFTWARE\*

## Installing IP Finder Software

*IP Finder searches for all the available ip devices currently connected to your network.*

1. Install **IP Finder** to find the Clebo camera on your local network. The software can be found on the included User Manual CD. Run **IP Finder** and install onto your PC.
2. When setup is complete, launch **IP Finder**.
3. To find your Clebo camera, click **Search** button. Your Clebo camera will appear as "**Clebo-FD20**" or "**Clebo-FD20IR**".
4. Select the desired device and click **Web Connect** to access the camera directly via Internet Explorer.

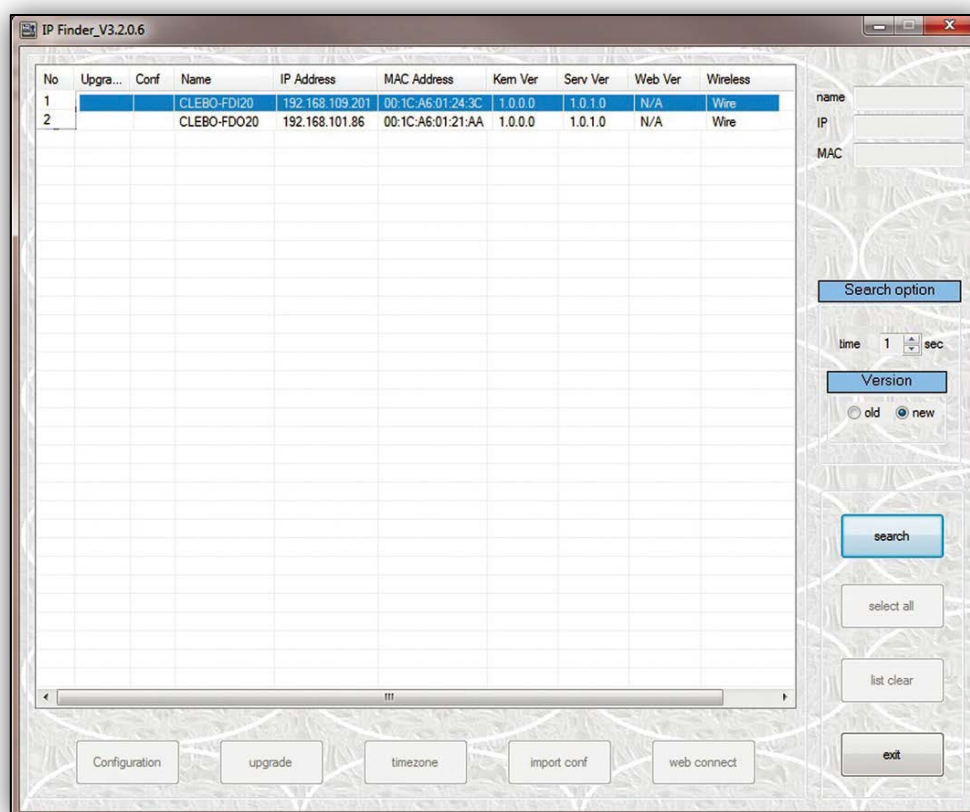


\*Make sure to install the IP Finder to a computer located on the same network segment (Subnet Mask) as the Clebo camera.

# IP FINDER SOFTWARE\*

## Using IP Finder Software

Use IP Finder to change the basic settings of your Clebo camera or to connect to your Clebo camera.

1. **Configuration:** Change the device's connection type and/or IP address information. Please see the next page for further explanation.
2. **Upgrade:** Upgrade the device's firmware.
3. **Time Zone:** Change the time zone.
4. **Import Config:** Import setup configuration for a specific device.
5. **Web Connect:** Connect to the Clebo camera through Internet Explorer.

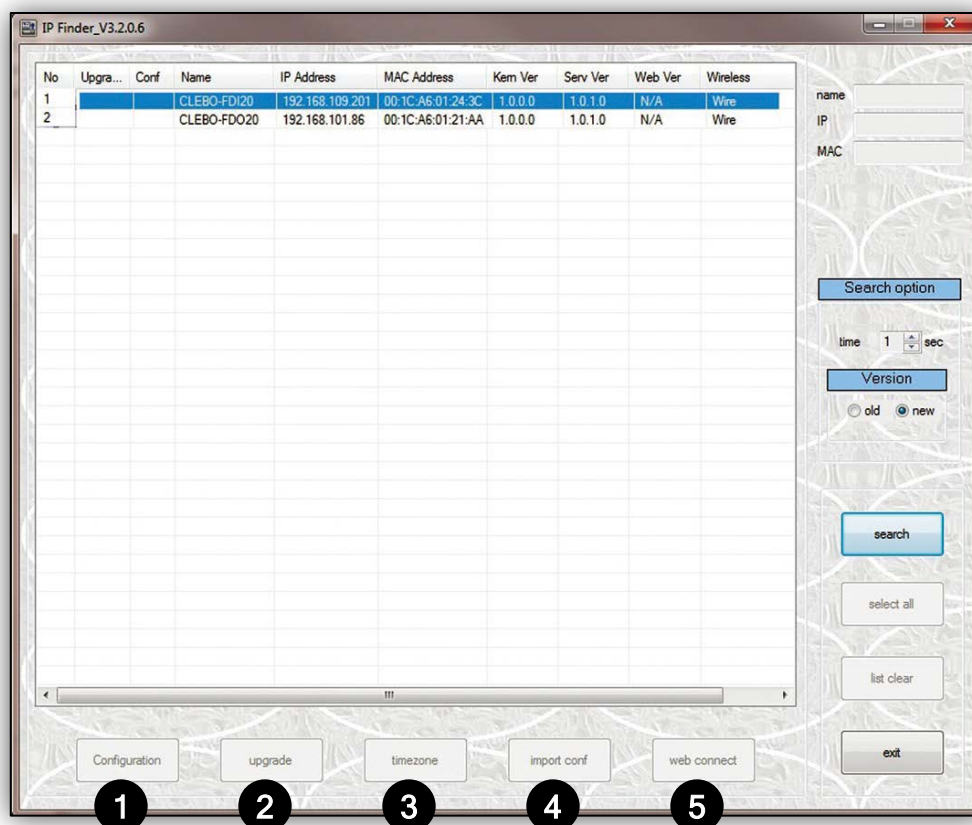


# IP FINDER SOFTWARE\*

## Using IP Finder Software

Use IP Finder to set the connection type and the IP address information for your Clebo camera.

1. **DHCP:** Select DHCP to access the camera within the same internal network.
2. **PPPoE:** Use this option when using WAN service. To use WAN service, a User ID and Password from your internet service provider is required.
3. **Static IP:** Select Static to connect to the camera from an external network.
4. **Use DDNS:** Check this option to use DDNS service.
5. **Port:** Displays the port numbers that are required for communication. User can use IP Finder to change other basic settings for the Clebo camera. (The menu will be different depending on the model.)

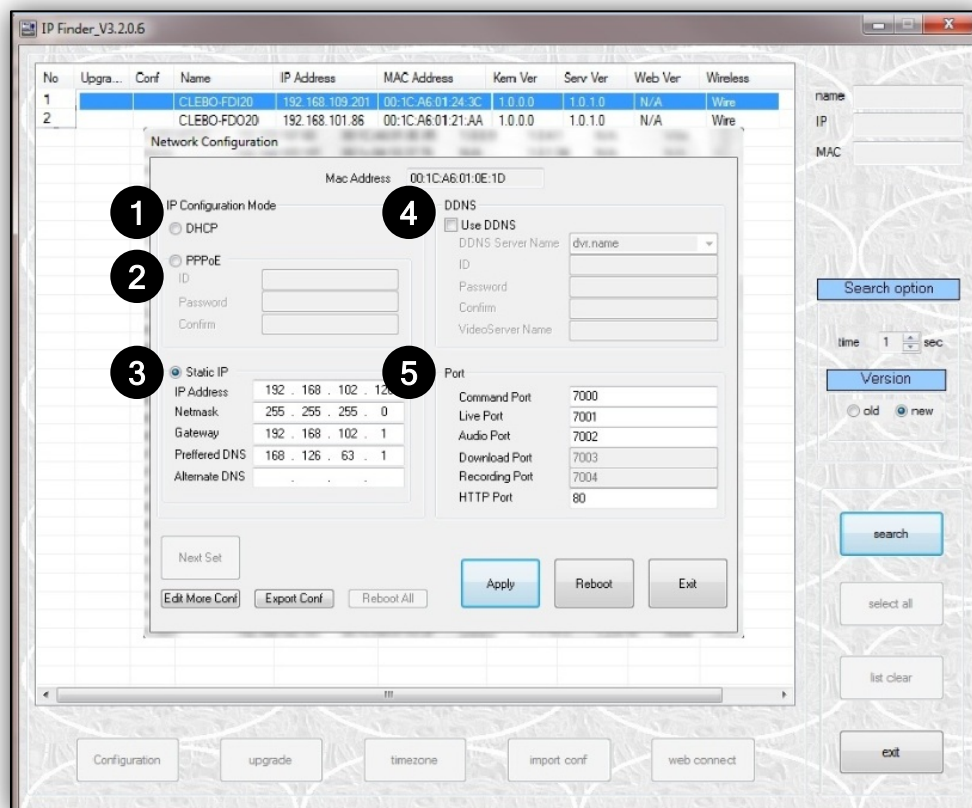

\*If you decide to change the camera's IP, write down the camera's MAC Address for identification in the future.

# IP FINDER SOFTWARE\*

## DHCP

*The Dynamic Host Configuration Protocol (DHCP) is a network configuration protocol that allows a device to configure automatically according to the network it is connected to.*

*If your network supports DHCP, and your Clebo camera is setup as DHCP; then once you search for your camera using IP Finder, the search results will display your Clebo camera with already set network settings that correspond to your network requirements.*

## Static

*Static IP addresses are recommended when using a network that does not support DHCP. If Static is selected, then you must enter manually all the network settings for your Clebo camera that would correspond with your network. Static IP addresses are recommended if you want to setup your device to be accessed externally via the internet. For each setup of the camera to static IP address, it is recommended that you first setup the camera to DHCP, allow it to configure itself according to your network, and then change the settings to a static IP address.*

1. To set your Clebo camera to static, highlight the desired device from the search results list, and click on Configuration. In the new setup window, verify static is selected.
2. Enter the following information: **IP Address**, **Netmask**, **Gateway**, **Preferred DNS**.
3. Click **Apply** and **Reboot** to save all changes.

## DDNS

*Dynamic Domain Server is a feature that allows you to use a URL instead of an IP address to access your Clebo camera. The feature is optional, for it may require subscription and payment.*

1. To use the DDNS feature, check the box next to **Use DDNS**.
2. Select the server you wish to use. \*Some servers may require subscription and payment.
3. Enter the desired **Hostname**.
4. If applicable, enter the **User ID** and **Password**.
5. Click **Apply** and **Reboot** to save all changes.


# CAMERA REBOOT\*

## Resetting the Camera

Pressing the reset button on the camera's control board for five (5) seconds will initialize all environmental variables to factory default. Previous setup for IP default, time, etc. will be deleted. If a system's IP address is lost, reset the camera back to factory default.

The following are the default network settings.

<b>IP Mode</b>	<b>DHCP</b>
<b>IP Address</b>	<b>192.168.1.123</b>
<b>Subnet Mask</b>	<b>255.255.255.0</b>
<b>Gateway</b>	<b>192.168.1.123</b>
<b>Base Port</b>	<b>7000</b>
<b>HTTP Port</b>	<b>80</b>

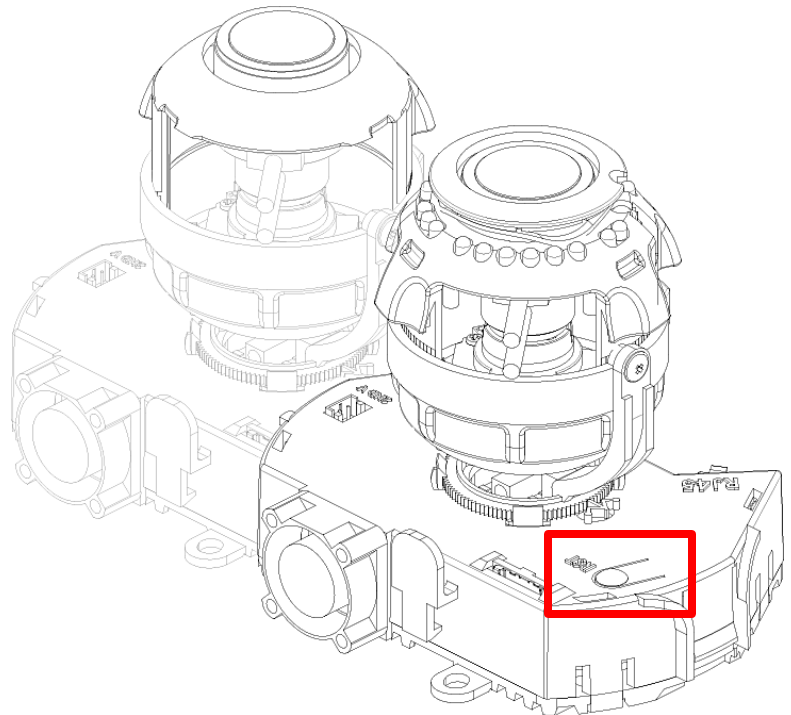

\*Frequent use may cause system error.

# WEBVIEWER\*

## Remote Video Monitoring Via Internet Explorer

*Monitor and configure the Clebo camera through a built-in Webviewer.*

1. Type the IP address of the camera on the Internet Explorer window.  
Example: `http://192.168.1.123` (Factory Default)
2. Enter Username and Password.  
Username: admin | Password: admin
3. The web browser will ask to install Active-X Control. Once it has been installed, Internet Explorer will display video images from the camera.





# WEBVIEWER\*

## Remote Video Monitoring Via Chrome, Firefox, or Safari

*You can view your Clebo camera using web browsers other than Internet Explorer. To do so, at least one of the streams of the camera must be set to the codec MJPEG.*

1. Open Google Chrome, Mozilla Firefox, or Apple Safari Web Browser.
2. Enter the IP camera's IP address. NOTE: If the first stream is set to H.264, then a video will not be displayed on the GUI.
3. Click the Setup button. Then go to Video & Audio > Stream Settings.
4. Modify one of the two (2) streams to the codec MJPEG.
5. When you are finished modifying the streams, click Apply to make sure all changes have been saved and your camera has been rebooted.
6. Exit the screen to return to the camera's main page.
7. At the bottom of the page, select the stream you set as MJPEG. The camera will start streaming video.

web setup | remote backup

**Video & Audio**

- Codec
- Color
- Audio
- Privacy Zone
- Event
- Network
- Record
- System

**Codec Configuration**

**First Stream**

Name: NVR\_cahhne6

Resolution: 704x400 (16:9)

Codec: H.264

Bitrate: 4000 [500 ... 8000] Kbps

Framerate: 30 (fps)

MJPEG Quality: Normal

**Second Stream**

Name: NVR\_channel14

Resolution: 704x400 (16:9)

Codec: H.264

Bitrate: 4000 [500 ... 8000] Kbps

Framerate: 30 (fps)

MJPEG Quality: Normal

Apply Reload




# WEBVIEWER\*

## Display Screen > First Stream & Second Stream

*Configure two stream settings for monitoring and recording.*

On the main monitoring page, user can view the camera with the First Stream settings or the Second Stream settings. Below the display screen, click on the First Stream and Second Stream buttons to view the different camera settings.

- To setup Stream Settings, refer to page 30.

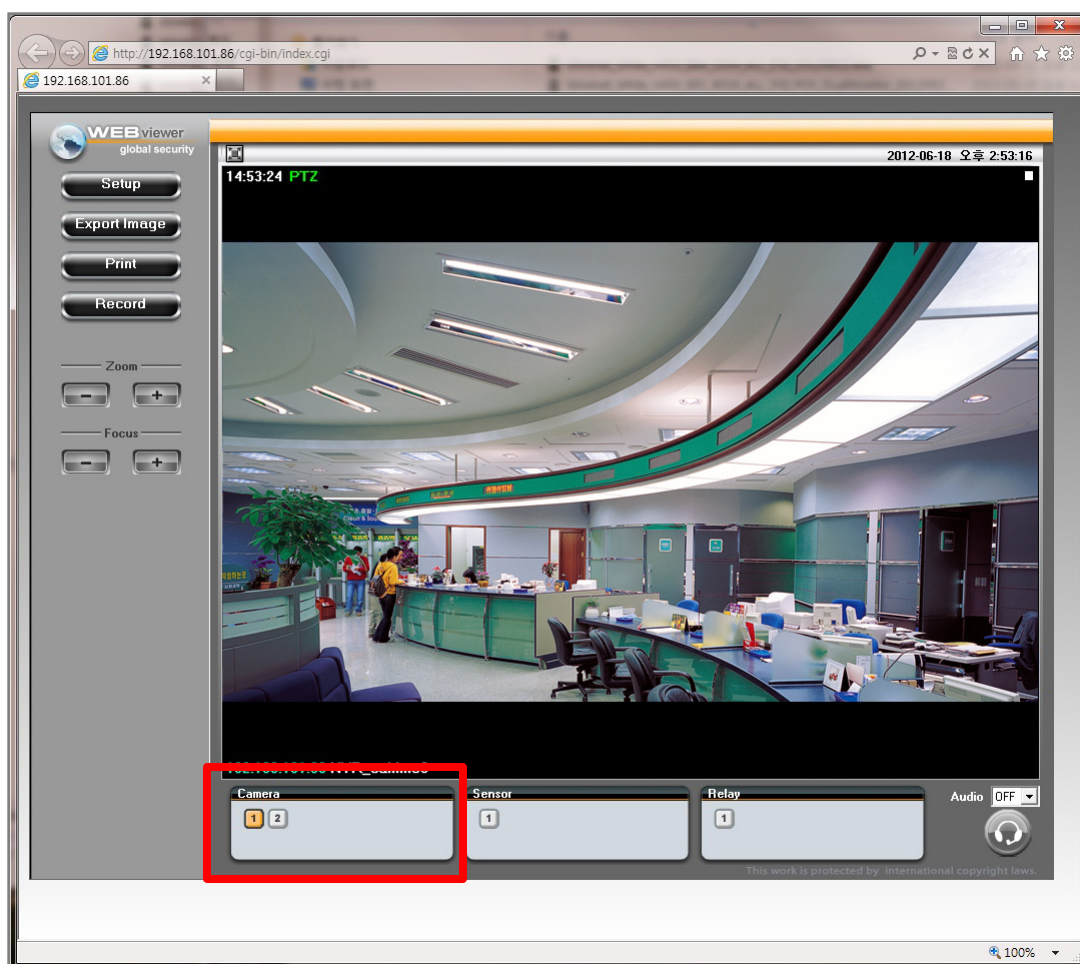


# WEBVIEWER\*

## Display Screen > Export Image

*Export a screenshot of current live video to your computer.*

1. Select the Export Image button. A 'Save As' window will appear.
2. Select the folder you wish to Save in and type a File Name.
3. Click 'Save' and the screenshot will be saved.

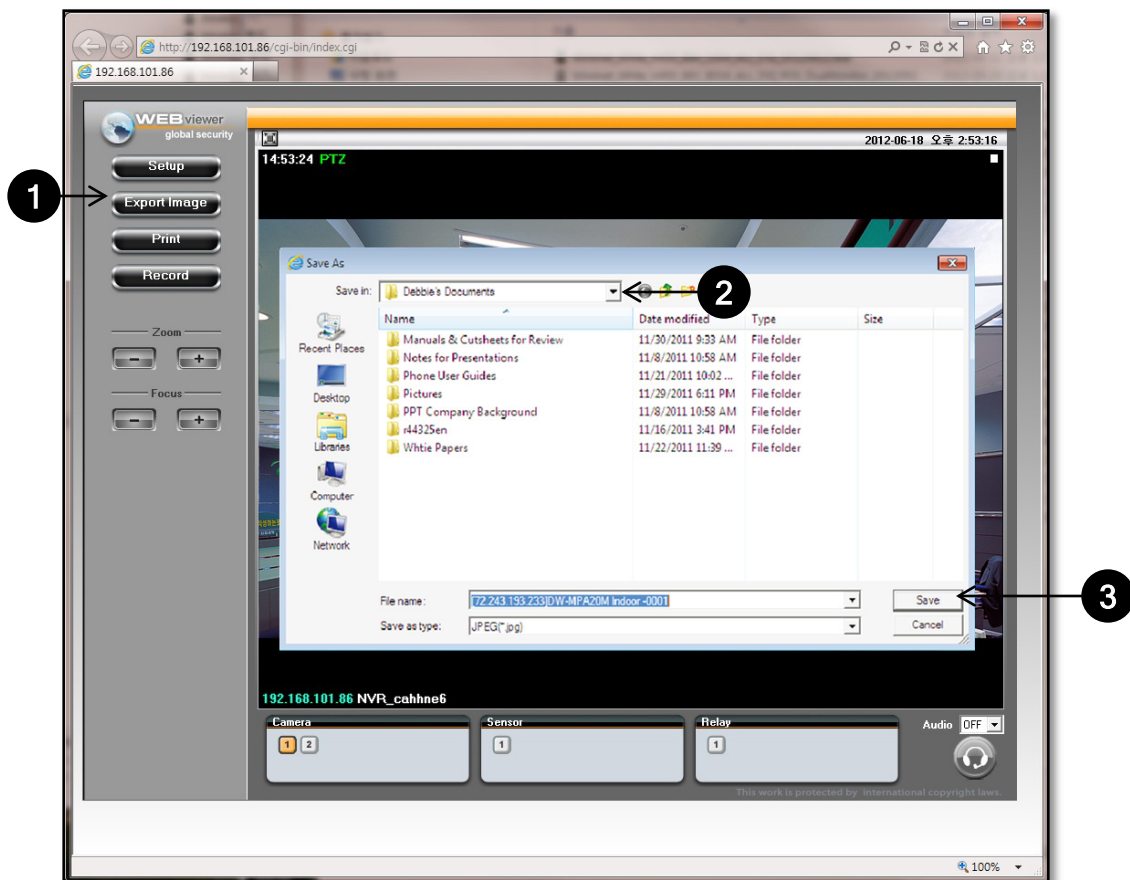


\*By default, image can only be saved as a JPEG file.

# WEBVIEWER\*

## Display Screen > Print Image

*Print a screenshot of the current live video.*

1. Select the Print button. The Print Preview window will appear.
2. Adjust the orientation of the screenshot: portrait or landscape, facing left, right, up, or down.
3. Zoom in on a portion of an image prior to printing.
4. Select the scale of how the image will be printed on the page: Original Size, Fit to Paper, or 50-200%.
5. To print information about the screenshot, select View Title.
6. To add a memo for the screenshot, select Page Option.
7. Go to Printer Setup to select the printer and manage printer properties.
8. Select Print to print the page, or Close to cancel the print.

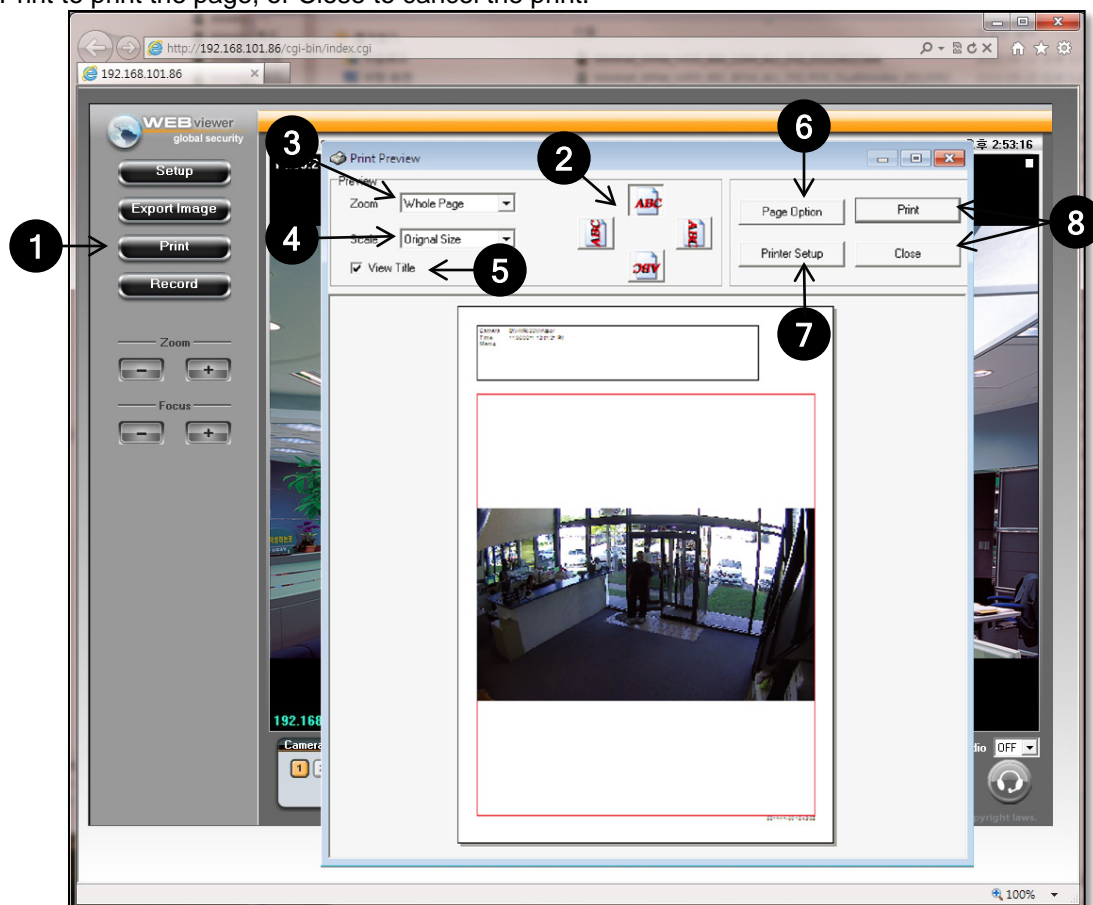


# WEBVIEWER\*

## Display Screen > Record

*Instantly record live video to your local drive.*

*To Setup Instant Recording*

1. Select the Record button.
2. Indicate where you want the videos to be saved.
3. Setup the duration of the instant recording. You can record up to 120 seconds of live video.
4. When setup is complete, click OK to save changes or Cancel to cancel any changes.

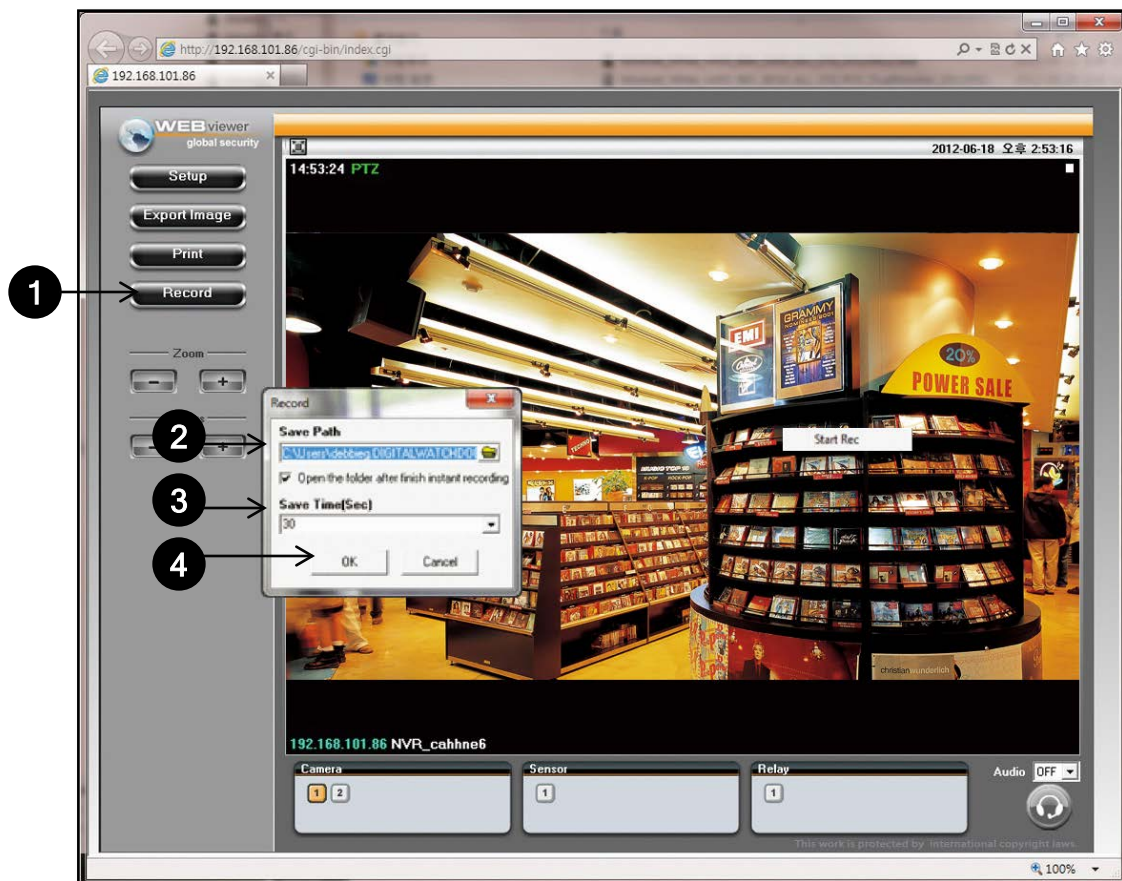


# WEBVIEWER\*

## Display Screen > Record

*Instantly record live video to your local drive.*

### *To Start and Stop Instant Recording*

- To Start, right-click anywhere on the display screen.
- Select Start Rec. The icon on the top right of the screen will change to **INSTANT**.
- To Stop, right-click anywhere on the display screen.
- Select Stop Rec. The video will be displayed in the designated folder when recording is complete.

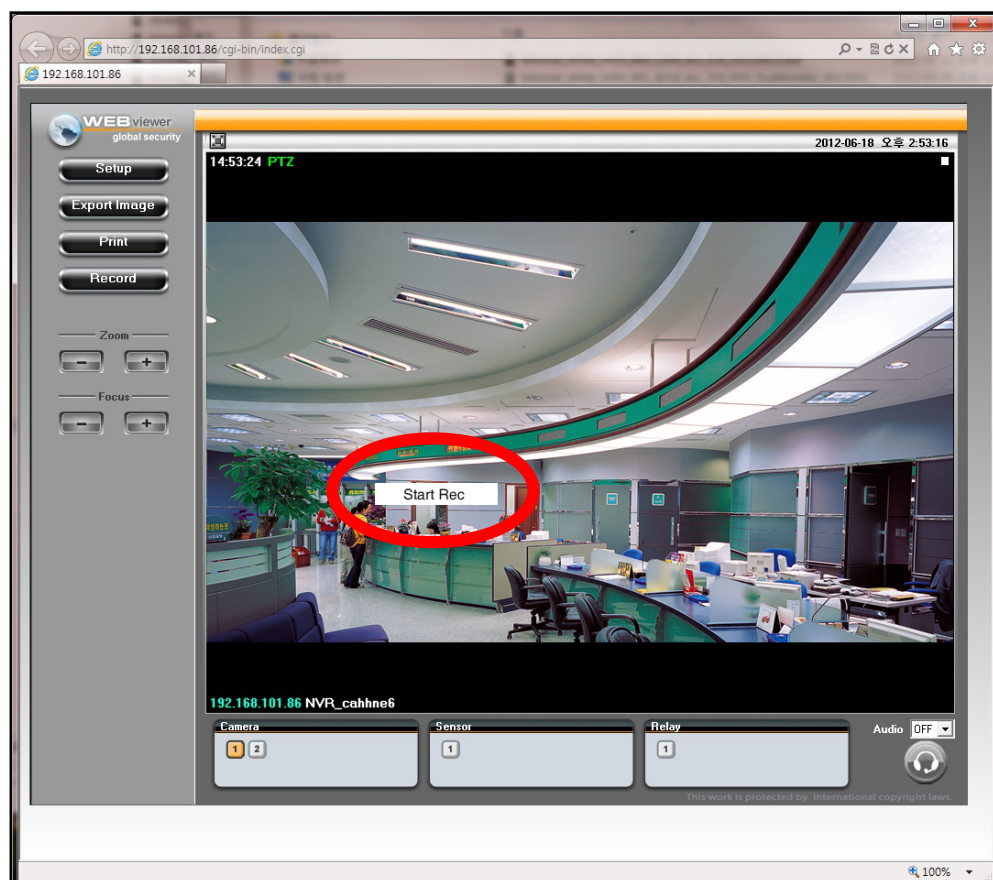


# WEBVIEWER\*

## Display Screen > Setup > Video & Audio > Stream Settings

The Recommended Stream Settings are indicated on the image to the left. This is also the factory default settings.

1. Name: Set a distinguished name to each stream to identify each.
2. Resolution: Set Resolution for each stream. The better the resolution of the video, the more bandwidth it will require to stream images.
3. Compression Type (Codec): Select the type of compression to use when outputting the video.
4. Data Transfer Speed: Set encoding bitrate if H.264 and MJPEG compression type is selected.
5. Framerate: Select from 0fps to 30fps.
6. MJPEG Quality: Set MJPEG image quality. This is only available when the compression is set to MJPEG. The higher the quality, the more bandwidth will be required to stream the image.
7. Select Apply to save changes.

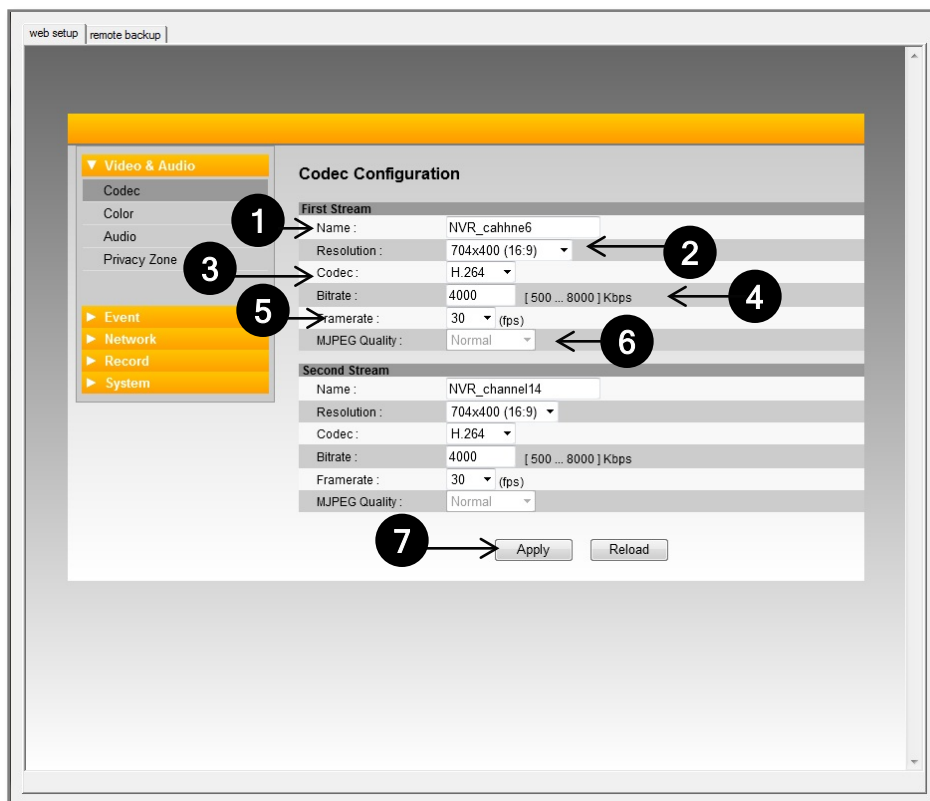



# WEBVIEWER\*


## Display Screen > Setup > Video & Audio > Color Settings

*Initially, the factory default settings will appear; however, you may customize the Color Settings for your Clebo camera.*

**White Balance:** Mode - Also known as Color Balance. This gives the camera a reference to “true white.” Select from Auto, Auto\_H, Auto\_L, Preset, or Manual.

**Auto Exposure:** Set Brightness, Shutter Mode, Digital Slow Shutter, Shutter Speed, AGC Gain, and BLC Mode.

1. Brightness: Select from 0 (darkest) to 20 (brightest).
2. Shutter Mode: Set the amount of light allowed in the video manually or automatically.
3. Digital Slow Shutter: Recommended in low light conditions. Turn On (2x, 3x, 4x) or Off.
4. Shutter Speed: Select the speed at which the camera's shutter will operate—1/30, 1/60, or 1/120.
5. AGC Gain: Maximum light gain settings in low light conditions. Select from 0 (least light) to 20 (most light).
6. BLC (Back Light Compensation) Mode: This setup allows the camera to process an image that is harshly silhouetted against a bright light source. Turn On or Off.
7. Select Apply to save changes.

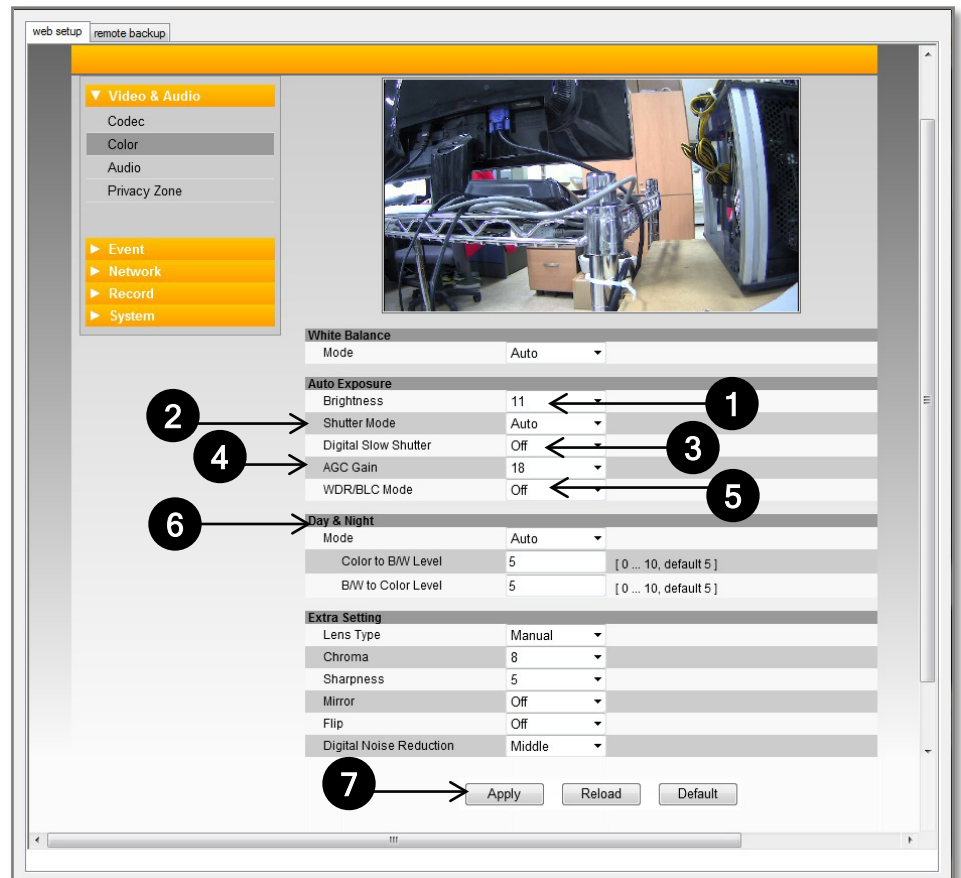

# WEBVIEWER\*

## Display Screen > Setup > Video & Audio > Color Settings

Initially, the factory default settings will appear; however, you may customize the Color Settings for your Clebo camera.

**Day & Night:** Set the mode to Night (B/W), Day (Color), or Auto. If set as Auto, set a desired Color to B/W Level and B/W to Color Level.

1. Switching from Color to B/W: Select from 0~10. The higher the number, the less darker the environment will have to be for the camera to switch from color to B/W.
2. Switching from B/W to Color: This number should always be lower than the number set to color to B/W.

**Extra Settings:** Set Lens Type, Chroma, Sharpness, Mirror, Flip, and Digital Noise Reduction.

3. Lens Type: Set the camera to an indoor or outdoor lighting environment. Select Manual, DC, or AF.
4. Chroma: Affect the quality of the color in the image. Select from 0~20. The higher the number, the brighter the color in the video.
5. Sharpness: Select sharpness from 0~10 of the image.
6. Mirror/ Flip: Select On or Off to mirror the image from left to right, or flip it upside down.
7. Digital Noise Reduction: Control the level of noise in the image. Select from Off, Low, Middle, or High.
8. Select Apply to save changes.

The screenshot shows the 'Day & Night' and 'Extra Setting' sections of the webviewer interface. The 'Day & Night' section includes 'Mode' (Auto), 'Color to B/W Level' (5), and 'B/W to Color Level' (5). The 'Extra Setting' section includes 'Lens Type' (Manual), 'Chroma' (8), 'Sharpness' (5), 'Mirror' (Off), 'Flip' (Off), and 'Digital Noise Reduction' (Middle). At the bottom are 'Apply', 'Reload', and 'Default' buttons. Numbered callouts 1 through 8 point to specific elements: 1 points to the 'Color to B/W Level' input field; 2 points to the 'B/W to Color Level' input field; 3 points to the 'Lens Type' dropdown; 4 points to the 'Chroma' dropdown; 5 points to the 'Sharpness' dropdown; 6 points to the 'Mirror' dropdown; 7 points to the 'Digital Noise Reduction' dropdown; and 8 points to the 'Apply' button.

Day & Night	
Mode	Auto
Color to B/W Level	5
B/W to Color Level	5

Extra Setting	
Lens Type	Manual
Chroma	8
Sharpness	5
Mirror	Off
Flip	Off
Digital Noise Reduction	Middle



Buttons: Apply, Reload, Default



# WEBVIEWER\*

## Display Screen > Setup > Video & Audio > Audio

- Connect speaker/microphone wires (not included) to your camera and to a monitoring device (ex.: PC computer).
1. On the Display Screen in your Webviewer, go to Setup, Video & Audio, and finally, Audio. Adjust settings to your preference.
    - a) Audio Input: Set Gain (0-5).
    - b) Audio Output: Set Buffering Time & Volume (0-5).
    - c) Network Transfer: Select Transfer Audio regardless of video.
    - d) Select Apply to save changes.
  2. On the Display Screen, change Audio (in the bottom left corner) from OFF to 1. This will enable you to hear external audio.
  3. To transfer audio to the camera, select the 'headset' button beneath Audio.

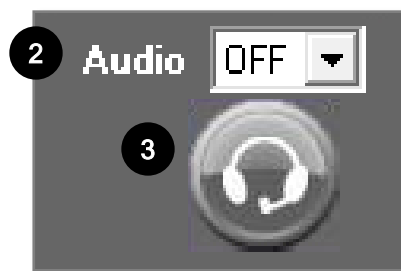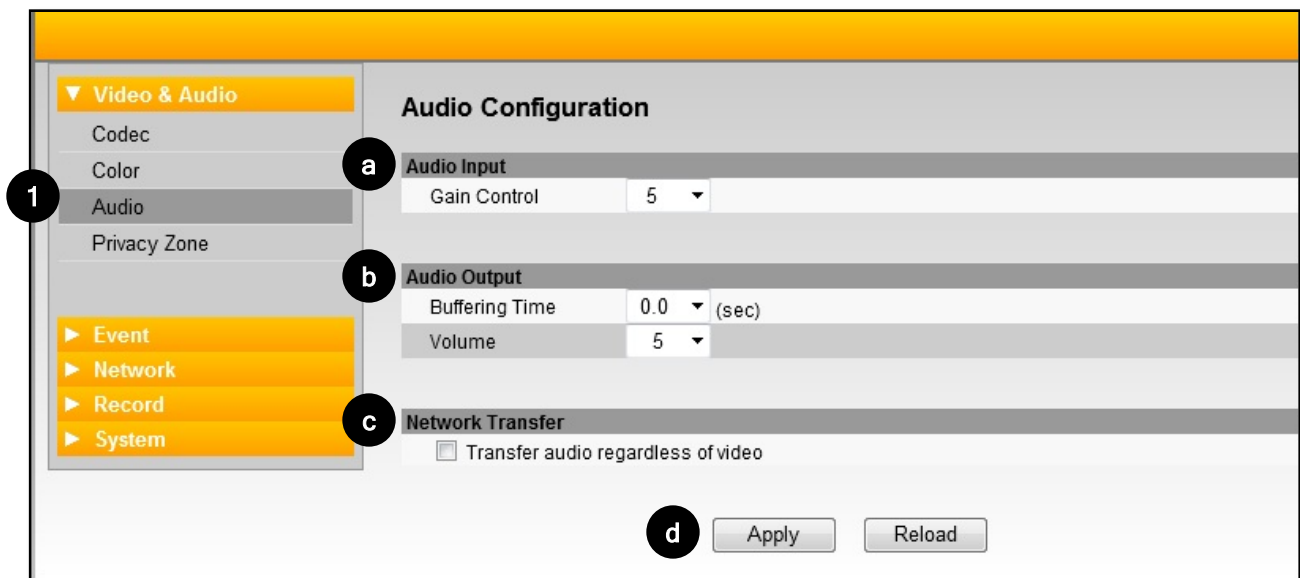

# WEBVIEWER\*

## Display Screen > Setup > Video & Audio > Privacy Zone

The MV421 Clebo camera offers up to 30 privacy zone settings. To set Privacy Zones:

1. Change Mode to On. Click Apply. By default, all 30 privacy zones will be displayed.
2. Select the color of the zone and transparency of the color from the drop down list. Click Apply.
3. Select the zones you want to view and/or modify. Use the Show All button to display all 30 privacy zones, or Hide All to deselect them and select only a single privacy zone. After selecting the privacy zone you want to modify, click Apply.
4. Set the zone's size and location, using the grid lines. In Local Settings, select the zone you want to modify, then select the position: Horizontal Position: 0~57; Vertical Position: 0~31; Width: 0~60; Height: 0~34.  
Click Apply after each modification to verify the size and position match your requirements.

**Global Settings**

Mode:

Color:

Display Zone:

<input checked="" type="checkbox"/> 1	<input checked="" type="checkbox"/> 2	<input checked="" type="checkbox"/> 3	<input checked="" type="checkbox"/> 4	<input checked="" type="checkbox"/> 5	<input checked="" type="checkbox"/> 6
<input checked="" type="checkbox"/> 7	<input checked="" type="checkbox"/> 8	<input checked="" type="checkbox"/> 9	<input checked="" type="checkbox"/> 10	<input checked="" type="checkbox"/> 11	<input checked="" type="checkbox"/> 12
<input checked="" type="checkbox"/> 13	<input checked="" type="checkbox"/> 14	<input checked="" type="checkbox"/> 15	<input checked="" type="checkbox"/> 16	<input checked="" type="checkbox"/> 17	<input checked="" type="checkbox"/> 18
<input checked="" type="checkbox"/> 19	<input checked="" type="checkbox"/> 20	<input checked="" type="checkbox"/> 21	<input checked="" type="checkbox"/> 22	<input checked="" type="checkbox"/> 23	<input checked="" type="checkbox"/> 24
<input checked="" type="checkbox"/> 25	<input checked="" type="checkbox"/> 26	<input checked="" type="checkbox"/> 27	<input checked="" type="checkbox"/> 28	<input checked="" type="checkbox"/> 29	<input checked="" type="checkbox"/> 30

**Local Settings**

Zone:

Horizontal Position:  Vertical Position:

Width:  Height:

# WEBVIEWER\*

## Display Screen > Setup > Event > Motion Detection

The screenshot shows a web interface for 'Motion Configuration'. On the left is a sidebar with a tree view containing 'Video & Audio', 'Event' (expanded), 'Motion Detection' (selected), 'Motion Area', 'Sensor', 'Emergency Alarm', 'Network', 'Record', and 'System'. The main area is titled 'Motion Configuration' and contains a 'Motion Detection' section with the following settings:

Motion Detection	
<input checked="" type="checkbox"/> Use Motion	
Sensitivity	Middle
Delay	5 sec
Relay	1
Duration	5 sec

At the bottom of the main area are 'Apply' and 'Reload' buttons. Numbered callouts point to the following elements:

- 1: 'Motion Detection' in the sidebar.
- 2: 'Sensitivity' dropdown menu.
- 3: 'Delay' input field.
- 4: 'Relay' dropdown menu.
- 5: 'Duration' input field.
- 6: 'Apply' button.

*The Motion detection feature allows the Clebo camera to detect motion and trigger an alarm. To set the camera to send e-mail notifications for every motion triggered alarms, see page 50.*

1. Check the Use Motion box.
2. Sensitivity: Select from Low, Middle, or High.
3. Dwell Time: When a motion is triggered, the camera can be set to record for a certain period of time. Dwell Time can be set up to 60 seconds.
4. Relay: an alarm out triggered by motion detection. Select None or 1.
5. Duration: determines how long the alarm out will last. Maximum is 900 seconds.
6. Select Apply to save changes.


To setup specific areas of the camera's view to motion detection, please see the next page.

# WEBVIEWER\*

## Display Screen > Setup > Event > Motion Area

*The Motion detection feature allows the Clebo camera to detect motion and trigger an alarm. To set the camera to send e-mail notifications for every motion triggered alarms, see page 50.*

1. Hold left mouse button and drag the mouse pointer over image to select the motion area, or use Set All button to select the entire screen.
2. Select Clear All to deselect motion areas.
3. Select Apply to save changes.

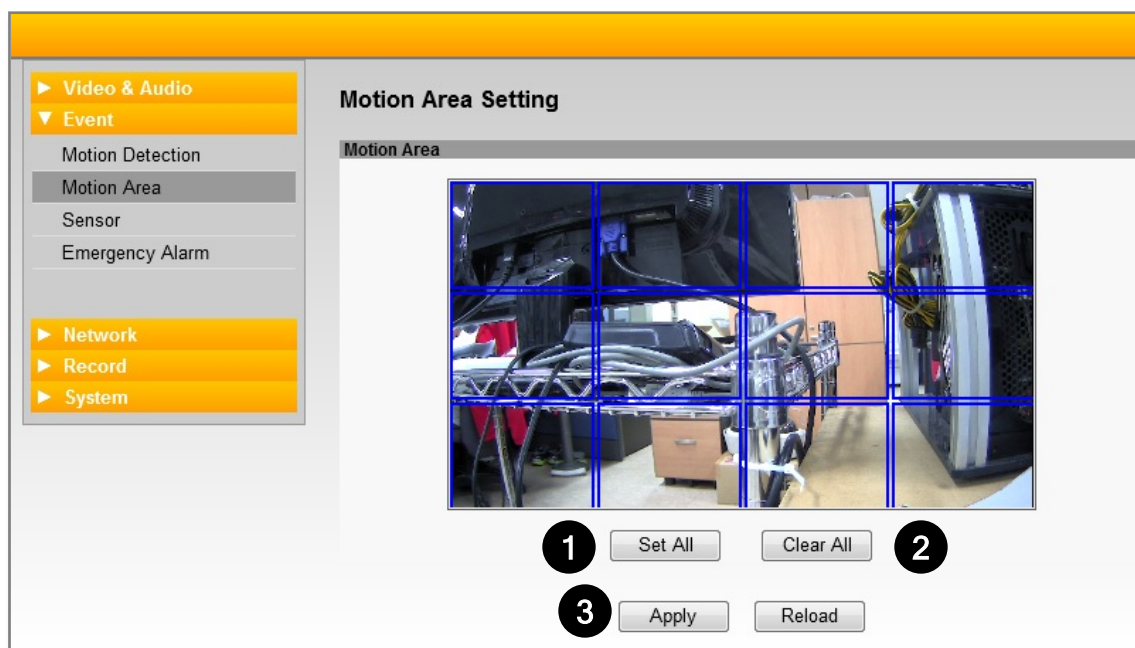

# WEBVIEWER\*

## Display Screen > Setup > Event > Sensor Settings

### To Use Sensor

- Sensor:** Select sensor type(NO/NC) and check sensor number. To use relay out, check relay number and set time to activate.  
*NO(Normal Open): Sensor is activated when it closes. (Example: Door normally remains open and an alarm is triggered when the door closes.)*  
*NC(Normal Close): Sensor is activated when it opens. (Example: Window normally remains closed and an alarm is triggered when the window is opened.)*
- Relay Activity:** To use Relay Activity, select USE and set time to activate.
- Select Apply to save changes.

Sensor Configuration					
Sensor					
Use	Type	Delay(sec)	Camera	Relay	Dur(sec)
<input checked="" type="checkbox"/> 1	<input checked="" type="radio"/> NO <input type="radio"/> NC	0	None	1	0

Relay Activity		
Use	Name	Activity Time
<input type="checkbox"/> 1		0 : 0 ~ 0 : 0

Apply Reload

# WEBVIEWER\*

## Display Screen > Setup > Event > Emergency Alarm

Send alarm triggered information to predefined destination (i.e. remote client software).

1. **Site Information:** Site Name, Transmission Settings, and Video Duration for the video that will be sent when motion is detected.
2. **Emergency Alarm Recipient List:** Enter the IP address and the Port for the remote site(s) to which you want to send the video. You can set-up up to five different servers. You must set same port to get EA data.
3. **Event for EA:** Select which type of event will trigger the alarm – Motion or Sensor.
4. Select Apply to save changes.

**Emergency Alarm Configuration**

1 **Stream for EA**  
Stream ☒ First ☐ Second

**Site Information**  
Site Code   
Transfer Time  sec

2 **EA Server List**

	IP	Port
Server1	<input type="text"/>	<input type="text" value="0"/>
Server2	<input type="text"/>	<input type="text" value="0"/>
Server3	<input type="text"/>	<input type="text" value="0"/>
Server4	<input type="text"/>	<input type="text" value="0"/>
Server5	<input type="text"/>	<input type="text" value="0"/>

3 **Event for EA**  
Camera1 ☒ Motion ☒ Sensor

4

# WEBVIEWER\*

## Display Screen > Setup > Network > Network Settings

1. IP Mode: Select the type of IP address for the camera.  
**DHCP:** IP is assigned automatically.  
**PPPoE:** Select this option when you use WAN service. To use WAN service, you will need a Username and Password from your Internet Service Provider.  
**Static IP:** Enter IP information on existing field if you decided to give the camera a static (fixed) IP address.
2. DNS: Enter Primary DNS and Secondary DNS.
3. IPv6 Mode: IPv6 offers a new 128-bit address system. You can use it to use an Automatic address generated by the network, or you can manually enter a Static address.
4. MAC Address: Displays the camera's MAC (Mobile Access Control) Address.
5. PORT: Displays all the ports necessary for network communication.
6. Reboot your system to apply the changes to your camera. To Reboot, select Apply. A dialogue box will appear, select OK. System will automatically restart and may take up to 20 seconds to reboot.

The screenshot shows the 'IP&Port Configuration' web interface. On the left is a sidebar with navigation options: Video & Audio, Event, Network (selected), IP&Port, Dynamic DNS, Live Protocol, IP Filter, OnVIF, Record, and System. The main content area is titled 'IP&Port Configuration' and contains several sections: 'IP Mode' with radio buttons for DHCP, PPPoE, and Static IP (selected); 'DNS' with input fields for Primary and Secondary DNS; 'IPv6 Mode' with radio buttons for Not Use, Auto, and Static; 'MAC Address' with a text field; and 'PORT' with input fields for Command, Live, 2Way Audio, Web, and Recording ports. At the bottom are 'Apply' and 'Reload' buttons. Numbered callouts (1-6) point to specific elements: 1 points to the IP Mode section, 2 to the DNS section, 3 to the IPv6 Mode section, 4 to the MAC Address field, 5 to the PORT section, and 6 to the Apply button.

Section	Field	Value
IP Mode	DHCP	<input type="radio"/>
	PPPoE	<input type="radio"/>
	Static IP	<input checked="" type="radio"/>
	IP Address	192.168.101.86
DNS	Primary DNS	168.126.63.1
	Secondary DNS	
IPv6 Mode	Not Use	<input checked="" type="radio"/>
	Auto	<input type="radio"/>
	Static	<input type="radio"/>
MAC Address	MAC Address	00:1C:AF:00:21:AA
	PORT	
PORT	Command Port	7000
	Live Port	7001
	2Way Audio Port	7002
	Web Port	80
	Recording Port	7004

# WEBVIEWER\*

## Display Screen > Setup > Network > Dynamic DNS

*If you do not use a public IP address, DDNS provides you to connect on WAN. DDNS allows you to connect to the Clebo camera with a URL address instead of an IP address. DDNS automatically redirects traffic to your IP address every time it changes.*

1. To use DDNS, select the Use DDNS checkbox.
2. Select one of the DDNS System Names from the drop down list.
3. Enter Username & Password. The Username & Password must be registered at the DDNS site.
4. Enter Host Name.
5. Reboot your system to apply the changes to your camera. To Reboot, select Apply. A dialogue box will appear, select OK. System will automatically restart and may take up to 20 seconds to reboot.

The screenshot shows the 'Dynamic DNS Configuration' interface. On the left is a sidebar menu with categories: Video & Audio, Event, Network (expanded), Record, and System. Under 'Network', the options are IP&Port, Dynamic DNS (highlighted), Live Protocol, IP Filter, and OnVIF. A callout '1' points to the 'Dynamic DNS' option. The main panel is titled 'Dynamic DNS Configuration' and contains a 'DDNS' section with a 'Use DDNS' checkbox. Below this are four input fields: 'System Name' (containing 'dvr.name'), 'Username', 'Password', and 'Hostname'. Callouts '2', '3', and '4' point to these fields respectively. At the bottom, there are 'Apply' and 'Reload' buttons. A callout '5' points to the 'Apply' button.



# WEBVIEWER\*

## Display Screen > Setup > Network > Communication Protocol

*Current Protocol displays the current selected protocol.*

1. To change the Protocol, select one of the three options—TCP, UDP, or Multicast.
2. If you select Multicast, enter the Multicast IP and Multicast Port.
3. Reboot your system to apply the changes to your camera. To Reboot, select Apply. A dialogue box will appear, select OK. System will automatically restart and may take up to 20 seconds to reboot.

The screenshot shows the 'Live Protocol Configuration' page in a web browser. On the left is a navigation menu with categories: Video & Audio, Event, Network (expanded), Record, and System. Under 'Network', the options are IP&Port, Dynamic DNS, Live Protocol (selected), IP Filter, and OnVIF. The main content area is titled 'Live Protocol Configuration' and contains a table with the following fields:

Live Protocol	
Current Protocol :	TCP
Protocol :	<input checked="" type="radio"/> TCP <input type="radio"/> UDP <input type="radio"/> Multicast
Multicast IP :	<input type="text"/>
Multicast Port :	<input type="text" value="0"/>

Below the table are two buttons: 'Apply' and 'Reload'. Numbered callouts are present: '1' points to the 'Multicast' radio button, '2' points to both the 'Multicast IP' and 'Multicast Port' input fields, and '3' points to the 'Apply' button.

# WEBVIEWER\*

## Display Screen > Setup > Network > Access Permission

Use the Access Permission page to allow or block specific IP addresses to connect to the camera.

1. Select Allow All to allow anyone to connect to this camera. If Allow All is selected, the Allowed IP List and Blocked IP List will be ignored.
2. To allow only a specific list of IP addresses to connect to this camera, select Allow. Enter an IP Address and click the Add button.
3. To block a specific list of IP addresses from connecting to this camera, select Block. Enter an IP Address and click the Add button.

**IP Filter Configuration**

**Filtering Mode**

☒ Allow All

☐ Allow

☐ Deny

IP

Add Delete

Allowed IP List

IP

Add Delete

Denied IP List


Apply Reload

# WEBVIEWER\*

## Display Screen > Setup > Network > OnVIF

*OnVIF is the Open Network Video Interface Forum.*

1. To use OnVIF, check Enable.
2. Set the Service Port to "8032."
3. Select On or Off for WS-Security.
4. Select desired Options from the list.
5. Select On or Off for WS-Discovery (Web Services Dynamic Discovery)
6. Select On or Off to Verify Service Address.
7. Select Apply to save changes.

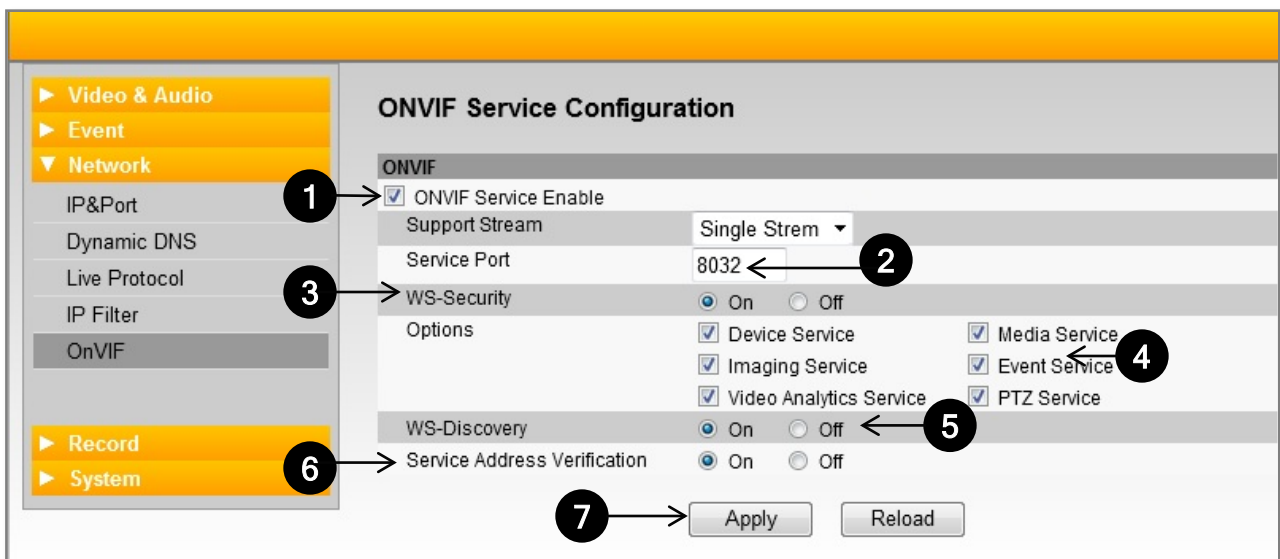

# WEBVIEWER\*

## Display Screen > Setup > Record > Storage Device


### Device Information

1. Click the icon Load Device Information to find the SD card connected to the camera.
2. The system will display all storage devices currently connected to the camera.
3. To activate the SD card to start recording, select Record Start.
4. To stop the SD card's recording, select Record Stop.

### Recording Information

5. This section displays the first and last recorded data available on the selected SD card.

SD card records video from the second stream. To modify recording quality, please see page 30.

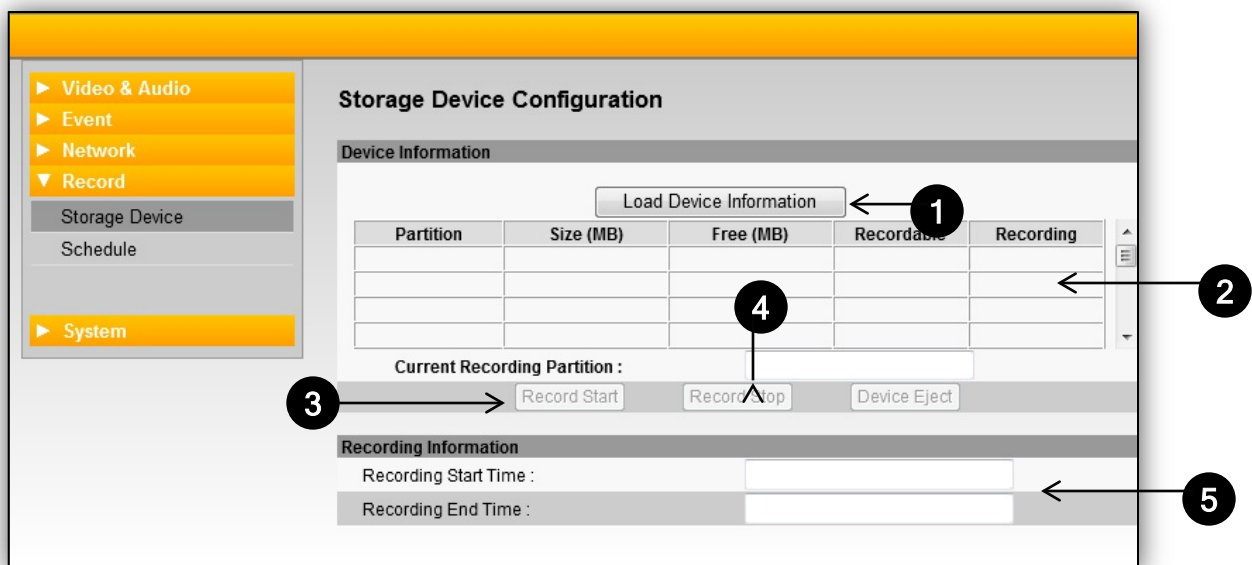

**IMPORTANT:** The SD card recording function operates as an emergency recording, designed to record video from the camera only when there is a network loss. If you connect to the camera via the Webviewer or an NVR, the SD card recording will stop.


# WEBVIEWER\*

## Display Screen > Setup > Record > Schedule

The recording schedule applies to the SD card local recording. When the camera detects a network loss, it will start recording backup video to the SD card based on the schedule setup.

### Video Schedule

1. Set recording schedule daily or weekly. Default is daily setting. It only saves single day's setting without changing to 'Multi Day Mode.'
2. Select the type of recording: Continuous (Cyan), Motion (Yellow) & Sensor (Red). Recording type displays on each block by its color.
3. To set a specific recording schedule, select Set below the schedule.
4. Click next to the recording mode (for example, motion) and hold. Drag your mouse over the hours you want to set for motion recording. The recording mode will be applied to the hours you selected when you release the mouse's right-click.
5. To remove scheduled recording for a specific day, select clear and press the box for which you want the recording removed. The box will now appear white.
6. Select Apply to save changes.

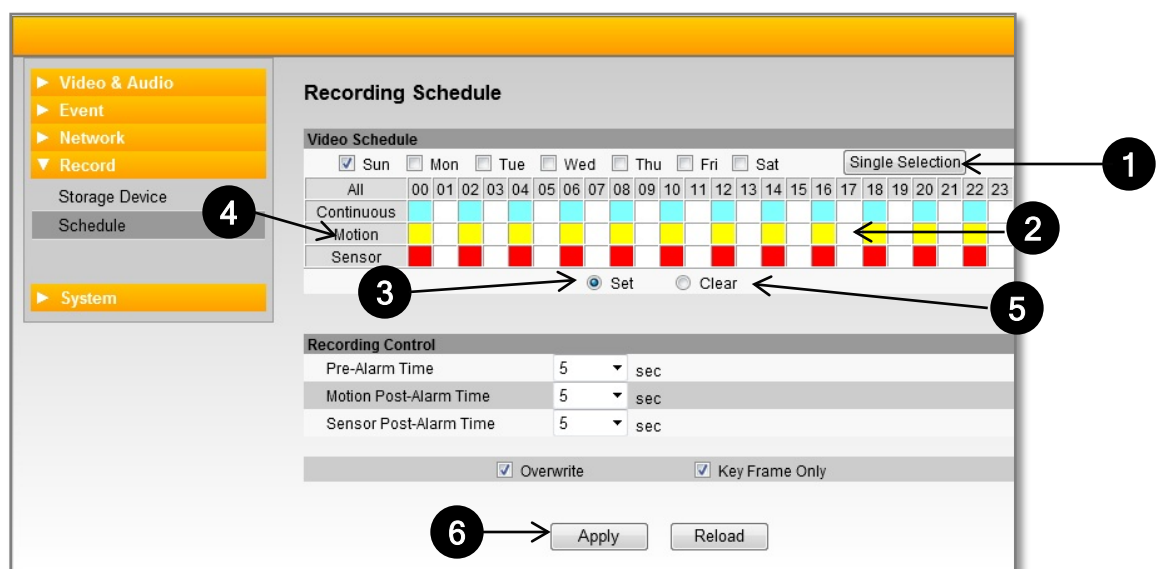

# WEBVIEWER\*

## Display Screen > Setup > Record > Schedule

*The recording schedule applies to the SD card local recording. When the camera detects a network loss, it will start recording backup video to the SD card based on the schedule setup.*

### Recording Control

5. **Pre-Alarm Time:** Save previous image of event for duration of time.
6. **Motion Post-Alarm Time:** Save images after motion events for duration of time.
7. **Sensor Post-Alarm Time:** Save images after sensor events for duration of time.
8. **Overwrite:** If selected, once the SD card is full, new video will be recorded over older data.
9. **Key Frame Only:** If selected, the SD card will record only Start and End Key Frame, the main frames in the series. This option is recommended when you have limited storage space.
10. Select Apply to save changes.

The screenshot shows the 'Recording Schedule' and 'Recording Control' sections of a web interface. The left sidebar has a menu with 'Video & Audio', 'Event', 'Network', 'Record', 'Storage Device', 'Schedule', and 'System'. The 'Record' section is expanded, showing 'Storage Device' and 'Schedule'. The 'Recording Schedule' section has a 'Video Schedule' table with days of the week and a 24-hour grid. The 'Recording Control' section has input fields for 'Pre-Alarm Time', 'Motion Post-Alarm Time', and 'Sensor Post-Alarm Time', each with a dropdown menu and a 'sec' unit. There are also checkboxes for 'Overwrite' and 'Key Frame Only', and 'Apply' and 'Reload' buttons. Numbered callouts 5 through 10 point to specific elements: 5 points to the 'Pre-Alarm Time' dropdown, 6 points to the 'Motion Post-Alarm Time' dropdown, 7 points to the 'Sensor Post-Alarm Time' dropdown, 8 points to the 'Overwrite' checkbox, 9 points to the 'Key Frame Only' checkbox, and 10 points to the 'Apply' button.

	Sun	Mon	Tue	Wed	Thu	Fri	Sat	Single Selection																
All	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Continuous																								
Motion																								
Sensor																								

☒ Set ☐ Clear

**Recording Control**

Pre-Alarm Time 5 sec 5

Motion Post-Alarm Time 5 sec 6

Sensor Post-Alarm Time 5 sec 7

8 ☒ Overwrite ☒ Key Frame Only 9


10 Apply Reload

# WEBVIEWER\*

## Display Screen > Setup > Remote Backup Tab

The FD20 Clebo Series allows you to backup your SD card locally to your computer without the need to remove it from the camera.

1. Go to the Remote Backup Tab in the camera's Setup menu.
2. On the calendar, select the date for remote backup.
  - a. Days with recorded data will be indicated in BOLD.
  - b. Hours with recorded data on them will be indicated by the pink line in the time bar.
3. Select the Backup Start Time and Backup End Time.
4. Select the Target Drive. The Target Drive is where the remote backup will be saved.
5. You can also use the interactive time bar.
  - a. Right-click on the time you want to set as Start Time.
  - b. Left-click on the time you want to set as End Time.
  - c. The time frame you have selected will appear in BLUE.
6. Select Backup Start. To cancel a backup in progress, select Backup Cancel.

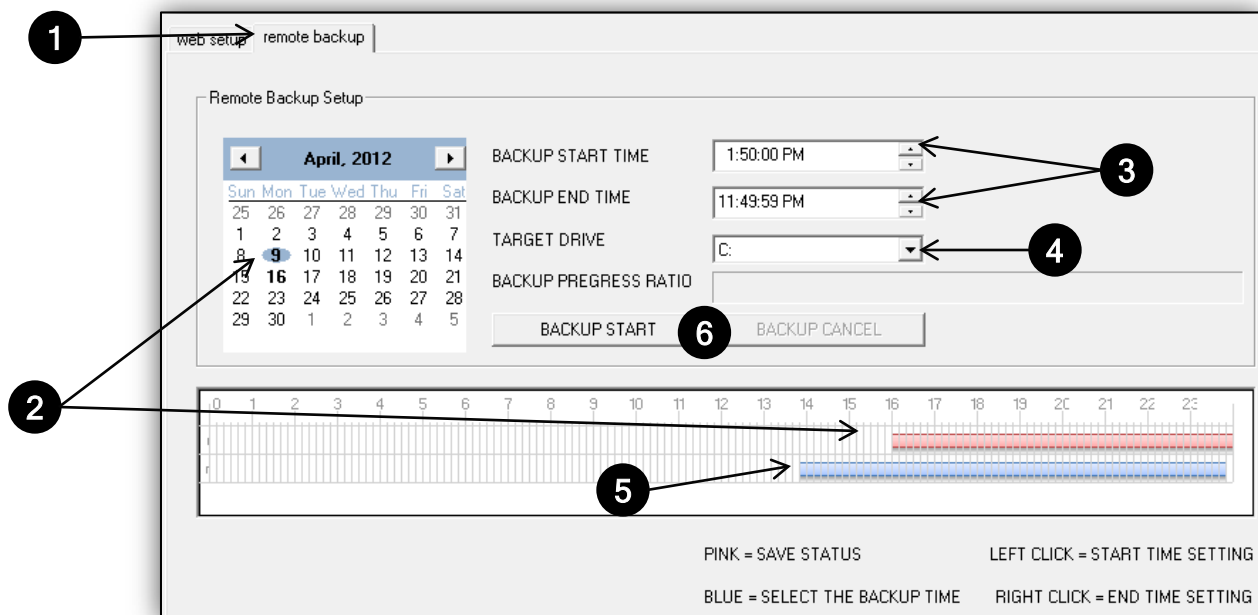



# WEBVIEWER\*

## Display Screen > Setup > System > Upgrade

*Upgrade the Clebo camera with an upgrade file.*

1. **System Version:** Shows the current version of the camera.
2. **Manual Upgrade:** To upgrade system firmware, you have to contact manufacturer and get the upgrade file first. Go to [www.nclebo.com](http://www.nclebo.com).
  - a. Browse file and select the file.
  - b. Press Upgrade button. A dialogue box will appear. Select OK. System will automatically reboot.
3. **FTP Upgrade:**
  - a. Server Address: FTP Server IP address
  - b. Port: Default is 21
  - c. User ID: FTP Server Log in ID
  - d. Password: FTP Server Log in Password
  - e. Directory: Upgrade File Path
  - f. Action: Select Check Upgrade to display the Upgrade File list
  - g. Status: Display progress of the Upgrade
  - h. If camera detects an upgrade, a dialogue box will appear. Select OK. System will automatically reboot.

The screenshot shows the 'System Upgrade' web interface. On the left is a navigation menu with options: Video & Audio, Event, Network, Record, System, Upgrade, Date&Time, Event Mail, User Management, System Information, Logs View, and Factory Default. The 'System' menu item is selected. The main content area is titled 'System Upgrade' and contains three sections: 'System Version', 'Manual Upgrade', and 'FTP Upgrade'. The 'System Version' section shows 'Camera Firmware : 4.1', 'Kernel Version : 1.0.0.0', and 'Server Version : 1.0.1.0'. The 'Manual Upgrade' section has fields for 'Kernel Upgrade', 'Server Upgrade', and 'Upgrade Status', each with a file selection button and an 'Upgrade' button. The 'FTP Upgrade' section has fields for 'Server Address', 'Port' (set to 21), 'User ID', 'Password', 'Directory', 'Action' (with a 'Check Upgrade' button), and 'Status'. At the bottom are 'Apply', 'Reload', and 'System Reboot' buttons. Three numbered callouts are present: '1' points to the 'System Version' section, '2' points to the 'Manual Upgrade' section, and '3' points to the 'FTP Upgrade' section.

# WEBVIEWER\*

## Display Screen > Setup > System > Date & Time

*Set date and time information.*

1. Insert the Date and Time. Select the type of Format for your time.
2. Select your Time Zone.
3. To synchronize with the NTP Server, select the option and type the NTP Server Address.  
Example: pool.ntp.org.
4. Select Apply to save changes.

The screenshot displays the 'Date & Time' configuration page. On the left is a sidebar menu with options: Video & Audio, Event, Network, Record, System (expanded), Upgrade, Date&Time (selected), Event Mail, User Management, System Information, Logs View, and Factory Default. The main content area is titled 'Date&Time' and contains the following fields:

- Date :** 2012 / 6 / 18 (with a placeholder '(YYYYMMDD)' and callout 1 pointing to the date input).
- Time :** 16 : 23 : 34 (with callout 1 pointing to the time input).
- Format :** 24 HRS (dropdown menu).
- Timezone :** (GMT) Casablanca, Monrovia (dropdown menu with callout 2 pointing to it).
- ☐ **Synchronize with NTP server** (checkbox with callout 3 pointing to it).
- NTP Server Address**: [text input field] (with callout 3 pointing to it).
- Update Status**: [text input field] (with callout 3 pointing to it).
- Buttons**: Apply (with callout 4 pointing to it) and Reload.

# WEBVIEWER\*

## Display Screen > Setup > System > E-mail Notification

*Send an e-mail notification when an event is triggered.*

1. Select Use Event Mail option. Select Event Type.
2. Enter SMTP Server information. Example: smtp.gmail.com.
3. Enter Username and Password.
4. Enter Sender E-mail.
5. Add the E-mail(s) you wish to send the notifications to.
6. Select Apply to save changes.

The screenshot shows the 'Event Mail Configuration' page in a web browser. On the left is a sidebar menu with categories: Video & Audio, Event, Network, Record, and System (expanded). Under 'System', options include Upgrade, Date&Time, Event Mail (highlighted), User Management, System Information, Logs View, and Factory Default. The main content area is titled 'Event Mail Configuration' and contains the following fields and controls:

- Use Event Mail:** A checkbox labeled '1' with an arrow pointing to it.
- Events:** A row of four checkboxes: 'Sensor', 'Relay', 'Reboot', and 'Upgrade'. An arrow labeled '1' points to this row.
- SMTP Server:** A text input field with an arrow labeled '2' pointing to it.
- Username:** A text input field with an arrow labeled '3' pointing to it.
- Password:** A text input field with an arrow labeled '3' pointing to it.
- Sender E-Mail:** A text input field with an arrow labeled '4' pointing to it.
- E-Mail List:** A section with a text input field (arrow '5'), and 'Add', 'Modify', and 'Delete' buttons.
- Buttons:** At the bottom, 'Apply' and 'Reload' buttons. An arrow labeled '6' points to the 'Apply' button.

\*Email Notifications do not support TSL/SSL option. Notifications are TEXT only.

# WEBVIEWER\*

## Display Screen > Setup > System > User Access Control

To add a new user:

1. Enter Username and Password.
2. Select a Permission type.
  - a) Super: Administrator
  - b) Operator: View and Edit Video and Event Settings Only
  - c) Viewer: View Only
3. Click Add.
4. Select Apply to save changes.

To modify a user, select the user from the User List, and click Modify.

To remove a user, select the user from the User List, and click Remove.

The screenshot shows the 'User Management' interface. On the left is a sidebar menu with options: Video & Audio, Event, Network, Record, System (expanded), Upgrade, Date&Time, Event Mail, User Management (selected), System Information, Logs View, and Factory Default. The main area is titled 'User Management' and contains two sections: 'User Registration' and 'User List'.

**User Registration**

Username :  (Callout 1 points to this field)

Password :  (Callout 1 points to this field)

Permission : ☒ Super ☐ Operator ☐ Viewer (Callout 2 points to the radio buttons)

Buttons: Add (Callout 3 points to this button), Modify, Remove

**User List**

Username	Permission
admin	Super
guest	Viewer
123123	Super

Buttons: Apply (Callout 4 points to this button), Reload

\*The maximum number of users who can be added to the User List is twenty.

# WEBVIEWER\*

## Display Screen > Setup > System > System Information

*System Information will display all the current camera settings: System Version, Time Information, Network Information, and Stream Information.*


System Information	
<strong>System Version</strong>	
Camera Firmware	4.1
Kernel Version	1.0.0.0
Server Version	1.0.1.0
<strong>Time Information</strong>	
Timezone	(GMT) Casablanca, Monrovia
NTP Server	Not Use
<strong>Network Information</strong>	
IPv4 Mode	Static (192.168.101.86)
DNS	168.126.63.1
IPv6 Mode	Not Use
MAC Address	00:1C:A6:01:21:AA
Port	
Command	7000
Live	7001
Web	80
Dynamic DNS	Not Use
Live Protocol	TCP
<strong>Codec Information</strong>	
First Stream	
Name	NVR_cahhne6
Resolution	704 x 400
Codec	H264
Bitrate	4000 Kbps
Framerate	30 fps
MJPEG Quality	Normal
Second Stream	
Name	NVR_channel14

# WEBVIEWER\*

## Display Screen > Setup > System > Logs View

User can view detailed logs for system and/or events triggered and recorded in the camera.


1. To view, select the type of report you want to view: System, Event, or System & Event.
2. Select View.
3. The system will generate a report up to 140,000 bits of data.
  - For events to record, make sure the camera is set to record when an event, like motion detection, is triggered. See page 35 for information on how to set motion detection for the Clebo camera.

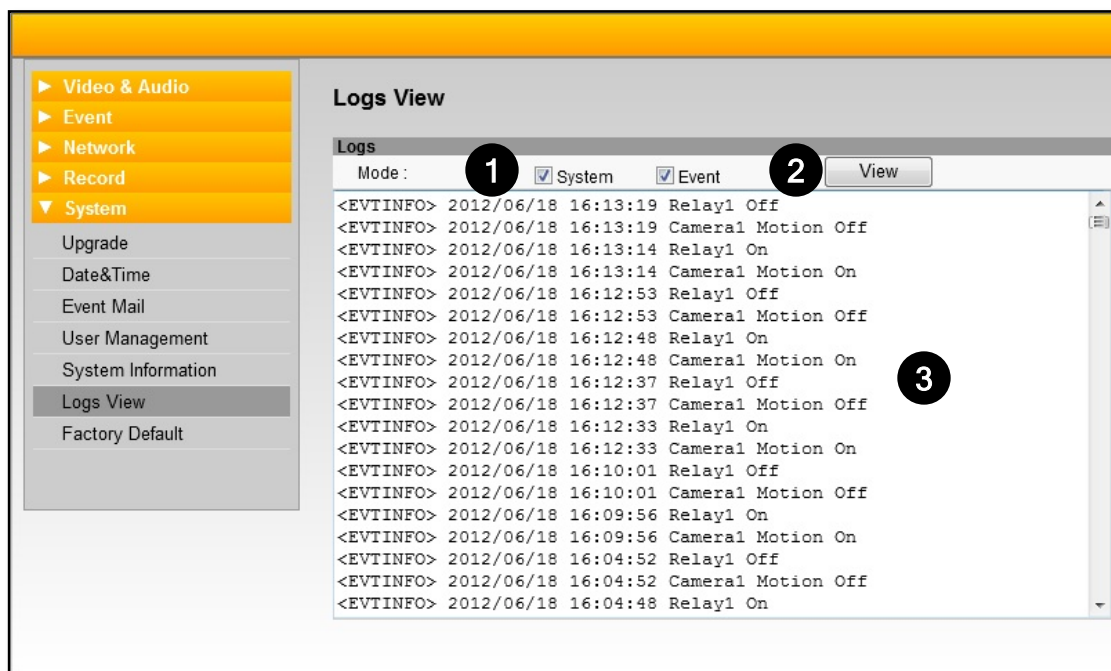

## WEBVIEWER\*

### Display Screen > Setup > System > Factory Default

*When you select Factory Default, a dialogue box will appear. If you click OK, all camera settings will erase and reformat to the factory default settings.*

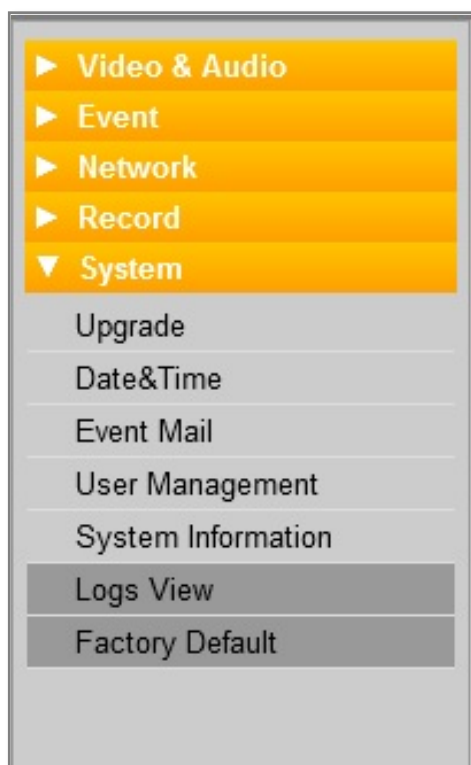

\*Factory Default will erase all your saved camera settings.



# SPECIFICATIONS\*

## IMAGE

Image Sensor	½.8" CMOS Sensor
Total Pixels	2010 (H) X 1109 (V)
Minimum Scene Illumination	F1.2 (30IRE): 0.5 Lux (Color) F1.2 (30IRE): 0.01 Lux (B/W)

## LENS

Focal Length	3.5~16mm
Lens Type	Auto Focus
IR Distance	70ft (MV421TIR Only)

## OPERATIONAL

Brightness	0~19
Shutter Mode	Auto/ Manual
Digital Slow Shutter	Off/ 2X/ 3X/ 4X
Shutter Speed	1/30, 1/60/ 1/120
Auto Gain Control	0~20
Back Light Compensation	Off/ On
Day and Night	Auto/ Day (Color)/ Night (B/W)
Lens Mode	Manual/ DC/ AF
Chroma (Color Quality: Hue, & Saturation Settings)	0~20
Sharpness	0~10
Mirror & Flip	Off/ On
3D- Digital Noise Reduction	Off/ Low/ Middle/ High
Privacy Zone	Off/ On (30 Programmable Zones)
Motion Detection: Sensitivity	Low/ Middle/ High
RS232	Console Cable
Audio Communication	Two-Way
Digital Zoom	8X Digital Zoom
Sensor	1 Input/ 1 Output Built-In
Remote Backup	Up to 24 HR Backup to Local Directory
Recording Schedule Setup	Continuous/ Motion/ Sensor/ Pre- & Post- Alarm

# SPECIFICATIONS\*

## NETWORK

LAN	802.3 Compliance 10/100 LAN
Video Compression Type	H.264, MPEG4, MJPEG (Super Fine ~ Low)
Resolution	1920X1080 (16:9) ~ 320X240 (4:3)
Frame Rate	Up to 30fps at All Resolutions
Stream Capability	Dual-Stream at Different Rates and Resolutions
IP	IPv4, IPv6
Protocol	TCP/IP, HTTP, DHCP, PPPoE, ICMP, ARP, RARP, RTSP, NTP, UDP, Multicast
Maximum User Access	20 Users
Memory Slot	Local SDHC Card Backup
ONVIF Conformance	Yes
Web Viewer	Supported OS: Windows XP, Windows Vista, Windows 7, MAC OS Supported Browser: Internet Explorer, Google Chrome, Mozilla Firefox, Safari
Video Management Software	NxMS/ Pivot

## ENVIRONMENTAL

Operating Temperature/ Humidity	-10°C ~ 55°C (14°F ~ 131°F)
Operating Humidity	Less than 90% (Non-Condensing)
Storage Temperature	-20°C ~ 70°C (-4°F ~ 158°F)
IP Rating	IP68 (protects against Dust and Immersion Beyond 3ft).
Other Specifications	CE, FCC, RoHS

## Electrical

Power Requirement	DC 12V, PoE (IEEE802.3af Class 3)
Power Consumption	5.16W, 430mA (IR ON: 9.96W, 830mA)

## Mechanical

Housing Material	Aluminum
Dome Cover Material	Polycarbonate
Dimensions	139 X 118.8 mm (5.47 X 4.7 in)
Weight	2.05 lbs

## TROUBLESHOOTING

Before sending your camera for repair, check the following or contact your technical specialist.

### **I can't find my Clebo camera on the IP Finder software.**

- Is the PoE cable connected properly?  
Make sure cable is tightly connected at both ends. It should make a “click” sound when connected properly.  
Make sure cable is intact and there are no cuts or exposed wires.
- If Yes, are the camera's LED lights turned on and blinking?  
The camera's LED lights indicate that the camera is powered on. Blinking LED lights indicate that the camera has finished booting up and is transmitting data.
- If Yes, is the internet working properly?  
Make sure you can connect to the internet with other devices on the network (ex. your computer). Your internet could be temporarily down.
- If Yes and using a power adaptor, does it meet camera's power requirements?  
Power Requirements: DC12V (5.16W, 430mA), PoE Ports (Class 3, less than 7W)
- If Yes, if using PoE Switch, is it connected to a proper internet outlet and operating properly?  
Make sure the PoE Switch is connected to a router/modem and the ports that have devices connected to them have a green LED light on.
- If Yes, is the computer on the same network as the Clebo camera?  
Camera and computer should be connected to the same router. Contact your network administrator if you have more than one network available.
- If Yes, try pinging the IP camera's default IP address 192.168.1.123.  
From your desktop, go to Start > Programs > Accessories > Command Prompt. Type “ping 192.168.1.123” and press Enter. If you get the message “Request timed out,” camera is not connected. Camera is connected if you get data.
- If Yes, try connecting the camera to a differ port in the PoE Switch.  
That specific Switch Port may be damaged or currently not working properly.
- If Yes, try resetting the camera to default settings.  
Press the reset button on the control board and hold for 5 seconds. The camera will return to factory default with default IP address 192.168.1.123. If your network supports DHCP, the camera will be found using the IP Finder software with an IP address that matches your network's requirements.

## TROUBLESHOOTING

Before sending your camera for repair, check the following or contact your technical specialist.

### **I can't connect to my Clebo camera through the Web Browser**

- Are the camera's LEDs on and blinking?  
The camera's LED indicates the camera is On. If the LED blinks, the camera has finished booting up and is transmitting data.
- If Yes, is the internet working properly?  
Make sure you connect to the internet with other devices on the network (ex. your computer). Your internet could be temporarily down.
- If Yes, is the computer on the same network as the IP camera?  
Camera and computer should be connected on the same router. Contact your network administrator if you have more than one network available.
- If Yes, try pinging the Clebo camera's IP address as it appears on the IP finder.  
From your desktop, go to Start > Programs > Accessories > Command Prompt. Type "ping" followed by the camera's IP address; then, press Enter. If you get the message "Request timed out," camera is not connected. If you get data back, that means the camera is connected.
- If Yes, try connecting the camera to a different port in the PoE Switch.  
That specific Switch Port may be damaged or currently not operating properly.
- If Yes, check your security settings on your internet browser.  
Try adding the camera's IP address to the trusted sites list in your Internet Options. \*Setup may vary depending on the browser you use.

## TROUBLESHOOTING

Before sending your camera for repair, check the following or contact your technical specialist.

### **I can't see the live video of my Clebo camera.**

- Are you trying to view the camera's video from an Internet Explorer browser?  
Make sure you have the minimum PC requirements to view the MV421 Clebo camera. \*See below for more information.
- If Yes, did you install ActiveX files?  
When you connect to your Clebo camera for the first time, your browser will ask you to install ActiveX. Make sure your Web Browser's security settings do not block pop-up windows and allows ActiveX files to be installed and used. \*Setup may vary depending on the browser you use.
- If Yes, make sure nothing is blocking the camera's lens.
- Are you trying to view the camera's video from a different browser other than Internet Explorer (ex. Google Chrome, Mozilla Firefox, MAC Safari)?
- If Yes, at least one of the streams of the camera must have Codec (Compression Type) set to MJPEG.  
Go to the camera's setup menu. Select Stream Settings. Select one of the streams and change its Codec to MJPEG. Click Apply to save changes. Go back to live screen and at the bottom of the screen, select the stream you have set to MJPEG. Live video will start streaming to your web browser.

### **Web Viewer Specifications**

- Minimum Requirements for PC

CPU	Intel P4 2.0GHz Dual Core
RAM	More than 1GB
HDD	200 GB Required for Saving Clip Image
OS	Microsoft Windows XP or Higher
Resolution	Higher than 1024X768

## TROUBLESHOOTING

Before sending your camera for repair, check the following or contact your technical specialist.

### Setting the IP Address for your PC


Dynamic Host Configuration Protocol (DHCP) is the default setting for the camera.

If the Clebo camera is connected to a DHCP network and the camera's IP Configuration Mode is set to DHCP, the server will automatically assign an IP address to the camera. If the camera is using DHCP, the default IP address will be 192.168.1.123, and the default subnet mask will be 255.255.255.0.

The Clebo camera can also connect to the web viewer using a static IP address. This will allow you to set your own IP address manually.

Setup the Network Protocol on your PC.

1. Go to Network icon on your PC.
2. Right-click and select Properties.
3. Double-click Local Area Connection.
4. Click Properties.
5. Double-click Internet Protocol Version.
6. Select "Obtain an IP address automatically" to set the computer to a dynamic IP address, or select "Use the following IP address" to set the computer to a static IP address.
7. If the option "Use the following IP address" has been selected, setup the IP address as 192.168.1.XXX. The last three digits should be a number between 1 and 254.

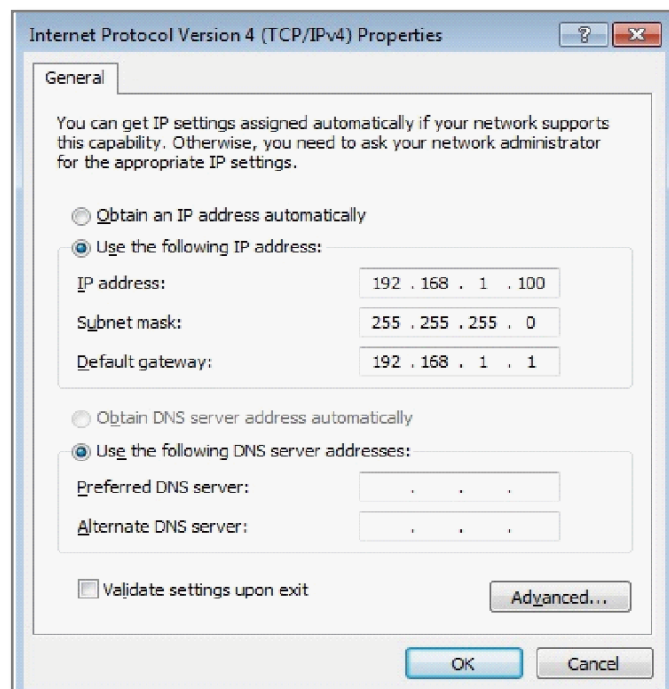

# WARRANTY INFORMATION\*

**win4net**(referred to as “the Warrantor”) warrants the Camera against defects in materials or workmanships as follows:

**Labor:** For the initial two (2) years, one (1) year for IR LED, from the date of original purchase if the camera is determined to be defective, the Warrantor will repair or replace the unit with new or refurbished product at its option, at no charge.

**Parts:** In addition, the Warrantor will supply replacement parts for the initial two (2) years, one (1) year for IR LED.

To obtain warranty or out of warranty service, please contact a technical support representative at +82-31-455-8600 Monday through Friday from 9:00AM to 6:00PM EST.

A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered. This warranty only covers failures due to defects in materials and workmanship which arise during normal use. This warranty does not cover damages which occurs in shipment or failures which are caused by products not supplied by the Warrantor or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustments of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, rental use of the product or service by anyone other than an authorized repair facility or damage that is attributable to acts of God.



## LIMITS & EXCLUSIONS\*

There are no express warranties except as listed above. The Warrantor will not be liable for incidental or consequential damages (including, without limitation, damage to recording media) resulting from the use of these products, or arising out of any breach of the warranty. All express and implied warranties, including the warranties of merchantability and fitness for particular purpose, are limited to the applicable warranty period set forth above.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights from vary from state to state.

If the problem is not handled to your satisfaction, then write to the following address:

win4net, Inc.  
1027-5 Hogey-dong, Dong an-gu,  
Anyang-si, Gyeonggi-do,  
Republic of Korea, 431-848

Service calls which do not involve defective materials or workmanship as determined by the Warrantor, in its sole discretion, are not covered. Cost of such service calls are the responsibility of the purchaser.

# **Clebo FD20 / FD20IR**

**IP 2.1MP Vandal Dome Camera**

---

**1027-5 Hogeong-dong, Dong an-gu,  
Anyang-si, Gyeonggi-do,  
Republic of Korea, 431-848**

**Tel : +82-31-455-8600  
Email : support@nclebo.com  
<http://www.nclebo.com>**